4+8CH
H.264 STANDALONE DVR SYSTEM

USER MANUAL

2011 MAR V2.0

WARNING

- Do not expose the DVR under the sunlight, heat or wet environment while installation. As it could decrease the performance of DVR and damage the machine.
- Do not touch the power plug or case with wet hands as this could result electric shock.
- Do not forcedly bend or put heavy object on power cable as this could result in injury to personal or equipment.
- Do not operate with damaged power cord or loose electrical outlet as this could result in electric shock or accident.
- Please use individual power instead of share electrical outlets with other electrical equipment as this could result in damage or accident.
- Do not attempt to service this DVR by yourself as it may expose you to dangerous voltage or other hazards. Please refer all service to the qualified servicing distributor.
- Do not open the covers or insert any object into DVR.

CAUTION

- Do not place the machine on an uneven surface or it would decrease the DVR efficiency or malfunction.
- Avoid any shock or bumping of the DVR while recording. Improper handling could damage the system.

CAUTION

Make sure the voltage selector switch is set to appropriate setting before plug in!

CONTENTS

1. Specification 1
2. Front Panel 2
3. Installation 2
4. DVR Installation 4
5. System Operation 4
6. Display Setup 6
7. Search 9
8. Main Menu 10
   - 8.1 Camera Setup 11
   - 8.2 Record Setup 13
   - 8.3 Alarm Setup 15
   - 8.4 Motion Detection 15
   - 8.5 Network Setup 16
   - 8.6 Log Search 18
   - 8.7 Backup 19
   - 8.8 System 20
     - 8.8.1 Time Setting 20
     - 8.8.2 HDD Setup 21
     - 8.8.3 Display Setting 22
     - 8.8.4 System Information 23
     - 8.8.5 User password 23
     - 8.8.6 System Language 24
     - 8.8.7 Audio setting 24
     - 8.8.8 System Maintenance 25
9. Cell Phone Monitoring Operation 26
10. H264Player Operation 46
11. Web Operation 49
12. Default Setting 57
13. USB Flash Memory Stick Support List 58

1. Specification

Type		4CH		8CH	
Video Format		NTSC	PAL	NTSC	PAL
Video Input		4 CH Input / BNC		8 CH Input / BNC	
Audio Input		4 CH Input / RCA			
Video Output		1 CH Output / BNC			
Audio Output		1 CH Output / RCA			
XGA Output		800x600, 1024x768, 1280x1024, 1440x900			
Alarm Input		4CH Alarm In			
Alarm Output		Buzzer, 1 x Relay Out (N.O, N.C)			
Display Mode		Full Screen, 4CH Split Screen, Auto Switch, Picture in Picture		Full Screen, 4/8CH Split Screen, Auto Switch, Picture in Picture	
Display Resolution		720 x 480	720 x 576	720 x 480	720 x 576
Recording Resolution	Highest	720 x 480	720 x 576	720 x 480	720 x 576
	High	720 x 240	720 x 288	720 x 240	720 x 288
	Normal	360 x 240	360 x 288	360 x 240	360 x 288
Recording Frame		Max. 120PS	Max. 100FPS	Max. 240 FPS	Max. 200 FPS
Compression Algorithm		H.264			
Operating System		Embedded Linux			
Pentaplex		Live / Record / Playback / Network / Mobile Phone			
Recording Mode		Manual, Schedule, Event			
Schedule Recording		Full Recording, Motion, Alarm, Manual Recording			
Status Indicator		Power, HDD1, HDD2, Network, Alarm			
Event Mode		Alarm Trigger, Motion Trigger, Video Loss			
		Recording Duration: 10~60 sec.			
Playback Mode		Normal Speed: x1			
		Fast Forward: x2 / x4 / x8 / x16 /x32multiple speed			
		Slow Forward: 1/2, 1/4, 1/8 multiple speed			
		Fast Rewind: x2 / x4 / x8 / x16 /x32			
		Frame by Frame Playback: Forward			
		Search Function: Time / Event			
Network Protocol		TCP/IP / PPPoE / DHCP / SMTP / DDNS / 3G			
HDD Type (No HDD Included)		**TYPE1**: Support SATA 3.5”HDD x 2 **TYPE2**: Support SATA 3.5”HDD x 1			
HDD Management		Automatic Format System			
PTZ Control		Communication Protocol (PELCO P, PELCO D, MIKAMI)			
Backup Device		USB 2.0 Flash Memory Stick			
Firmware Update		Host USB			
Multi-Language		English / Chinese / Others			
Control Mode		Front Panel / Remote Control / USB Mouse / Internet			
Network Control		IE Browser			
Network Function		Live Display / Playback / PTZ Control / System Setup			
Power Supply		**TYPE1**: DC 12V / 4.16A(AC100V~240V 50/60HZ) **TYPE2**: DC 12V / 3A(AC100V~240V 50/60HZ)			
Unit Dimension		220mm (W)x 288mm (D) x 48 mm (H)			
Weight		Unit Weight 1.6kg (HDD and Power Adapter Not Included)			
Operating Temperature		0℃ ~ 46℃			

2. Front Panel

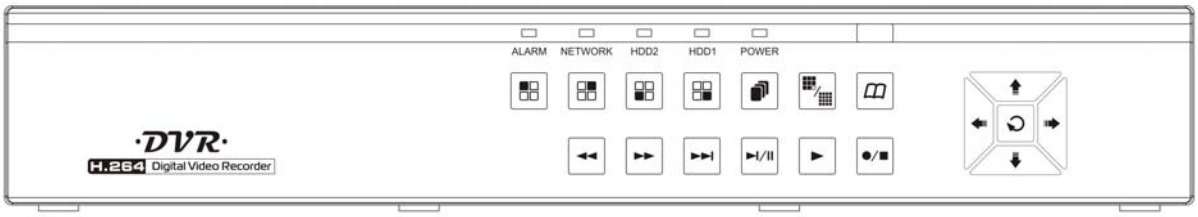

POWER	Power Indicator	The LED lights on when power on.
HDD1	HDD 1 Indicator	The LED lights on when the HDD1 is written.
HDD2	HDD 2 Indicator	The LED lights on when the HDD2 is written.
NETWORK	Network Indicator	The LED will light on when network connected.
ALARM	Alarm Indicator	LED on when the alarm is triggered.
	Channel 1/5	Under the live viewing mode channel 1/5 display. Under playback mode channel 1 display.
	Channel 2/6	Under the live viewing mode channel 2/6 display. Under playback mode channel 2 display.
	Channel 3/7	Under the live viewing mode channel 3/7 display. Under playback mode channel 3 display.
	Channel 4/8	Under the live viewing mode channel 4/8 display. Under playback mode channel 4 display.
	Auto Switching	Under the live viewing mode, press the button to start/stop the auto switching function.
	Quad/ 8 Division Display	Under the live viewing mode Quad/8 Channel display. Under playback mode Quad display.
	Menu	Under the live viewing mode, press MENU to enter the main menu. Under the menu mode, press MENU to go to the upper menu.
◄◄	Fast Rewind	Playback: x2 / x4 / x8 / x16 / x32 Multiple Speed.
►►	Fast Forward	Playback: x2 / x4 / x8 / x16 / x32 Multiple Speed.
►►I	Slow Forward	Playback: 1/2 / 1/4 / 1/8 Multiple Speed.
►I/II	Pause / Step	Under the playback mode, press the button to pause the playback. Under the playback mode, press Step button to enter Play Frame by Frame mode.
►	Play	Under the live viewing mode, press the Play button to enter the playback mode.
●/■	Manual Record/ Stop	Press this button to start recording in live mode. Under the playback mode, press the button to stop the operation or go to upper menu.
	Up	To move up of the selection setting in menu.
	Down	To move down of the selection setting in menu.
	Left	To move left of the selection setting in menu.
	Right	To move right of the selection setting in menu.
	Enter	Press the Enter button to confirm the setup or go into sub-menu.

3. Installation

4CH DVR

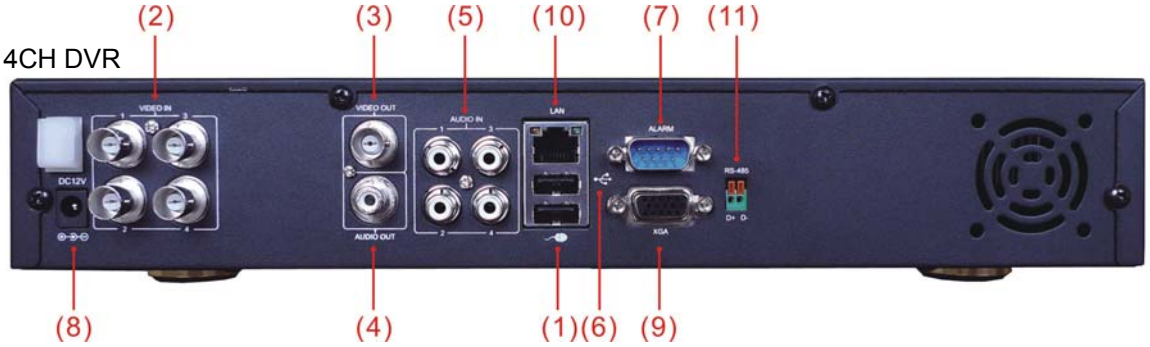

8CH DVR

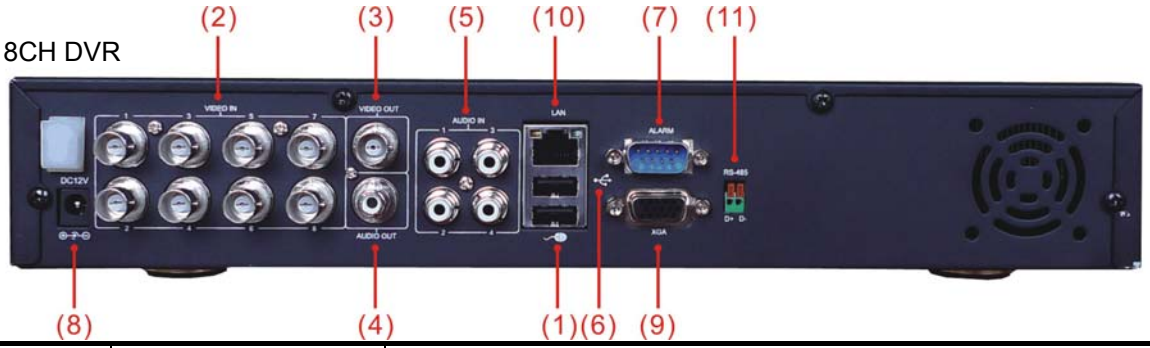

1	USB Mouse Port	2.0 USB Mouse
2	Video In	4/8CH Video Input (BNC)
3	Video Out	1CH Video Output (BNC)
4	Audio Out	1CH Audio Output (RCA)
5	Audio In	4CH Audio Input
6	USB 2.0 PORT	USB Backup or Firmware Update
7	Alarm	Alarm I/O
8	DC12V	Power Input
9	XGA	PC Monitor Output
10	LAN	RJ-45 Network Connection
11	RS-485	For Speed Dome Use

■ Alarm I/O

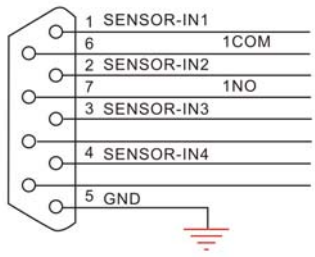

Item
Point 1: CH1 sensor input.
Point 2: CH2 sensor input.
Point 3: CH3 sensor input.
Point 4: CH4 sensor input.
Point 5: ground.
Point 6: the first relay joint port.
Point 7: the first relay normal open.

4. DVR Installation

- Connect the camera video output to the DVR video input port with BNC connectors.
  The camera install coaxial cable is suggested cat 6 or above.
- DVR Network installation
  Please connect DVR to HUB or router by using RJ-45 network cable and make sure the DVR network indicator LED is on.
  (Please refer to Network Setup for further network setting information of using static IP, PPPoE or DHCP.
- Alarm Installation
  Please refer to Installation for external alarm I/O installation. Please refer to Alarm Setup.
- Speed Dome Installation
  This device can support 3 kinds of communication protocol (Pelco D, Pelco P & MIKAMI)
- Power Installation
  Please use the provided power cable and adaptor to connect the DVR (AC100V~AC240V). Please refer to Installation for connecting position. The DVR system will enter into live viewing mode when power is connected. Please refer to Display Setup - Live Viewing Mode for more information.

5. System Operation

There are 3 kinds of DVR control method: front panel, remote control and USB mouse.

- USB Mouse Operation
  1. Quick Menu: Right click the mouse button under the live viewing mode to go for enter into Quick Menu.
  2. Left click the mouse button under the main menu to go to the sub-select menu.
  3. Left click the mouse button under the select menu to go to the sub-menu.
  4. Use the mouse to change the setting.
  5. Please refer to Display Setup - PTZ Setup.
- Remote Control Operation
  Remote Control and front panel operation are the same; please refer to Front Panel and the reference table of the button as below.

■ Virtual Keyboard Operation

The text input of the virtual keyboard is as below:

Menu Operation	Front Panel & Remote Control Operation	Mouse Operation
Select character from virtual keyboard	[Up/Down/Left/Right]	[Move Cursor]
Keyin the select character	[Enter]	[Left Click]
Exit the virtual keyboard	[MENU]	[Left Click]out of selection area

Key Description of Virtual Keyboard	
←	Delete the previous character
123	Switch to text input
↵	Enter key. Save and exit the virtual keyboard
Other Keys	Character Keyin

■ Main Menu Operation

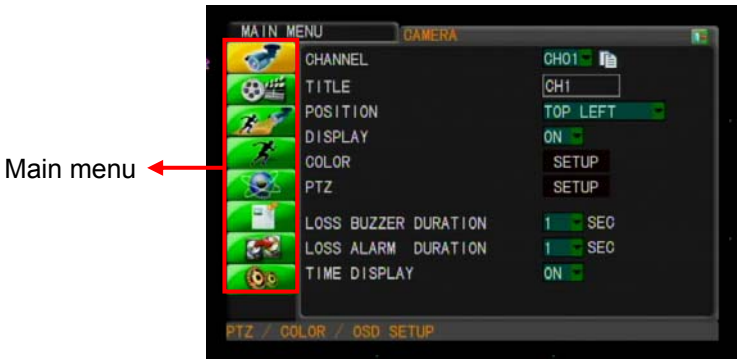

Setup Operation	Front Panel & Remote Control	USB Mouse
Select	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Menu	[Enter]	[Left Click]

■ Setup Operation

Setup Operation	Front Panel & Remote Control	USB Mouse
Select	[Up/Down/Left/Right]	[Moving Cursor]
Confirm Select Setting	[Enter]	[Left Click]
Change the Select Setting	[Left/Right]	[Left Click]

6. Display Setup

There are 3 kinds of screen display mode: Live, Auto Switching and PTZ. DVR.

■ Live Viewing Mode

The DVR will go to the live viewing mode after boot up. There are 5 different status icon:

●: Record
M: Motion Triggered
L: Video Loss
A: Alarm Triggered
: Sound on/off

Setup Operation	Front Panel&Remote Control	USB Mouse
Channel 1~4/8 Single Channel Display	[CH1~4/8]	Select one of channel [Double click left button]
4/8 Channel Split Display	[4/8 CH Split]	Under single channel [Double click left button]
Quick Menu	[MENU]	[Right]
Playback Mode	[Play]	[Right] QuickMenu
Start/Stop the Manual Record	[Record]	[Right] QuickMenu
Start/Stop the Auto Switching	Front Panel [Auto Switch] Remote Control [Auto Switch]	[Right] QuickMenu
Start/Stop Mute	Remote Control [Mute]	[Left] Left Click

■ Quick Menu

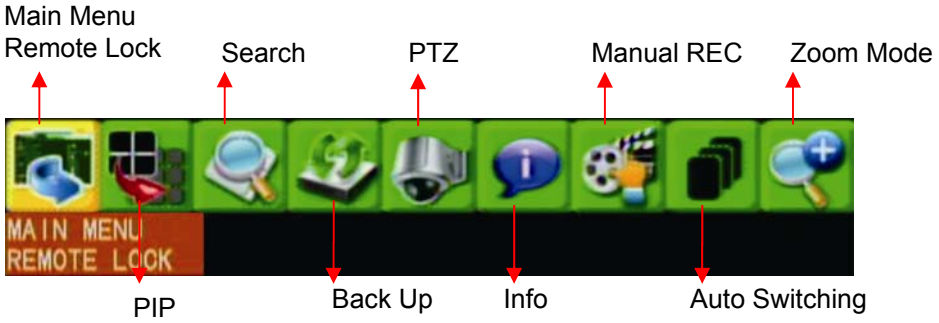

Setup Operation	Front Panel & Remote Control	USB Mouse
Select Item	[Left/Right]	[Moving Cursor]
Enter the Select Item	[Up/Down]	[Moving Cursor]
Confirm the Select Item	[Enter]	[Left Click]
Exit	[MENU]	[Left Click] out of selection area

■ PTZ

Please set the speed dome properly before control PTZ. Please refer to PTZ Setup.

Setup Operation	Front Panel & Remote Control	USB Mouse
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Item	[Enter]	[Left Click]
Zoom +,-		
Focus, +-		
Iris, +-		
Adjust Movement Speed		
PTZ Up / Down / Left / Right		
Start/Stop Auto Tracking		
Exit	[Right click] or [Left click]	

■ Playback Operation

Setup Operation	Front Panel & Remote Control	USB Mouse
Fast Rewind	[Fast Rewind]	
Fast Forward	[Fast Forward]	
Step Forward	[StepForward]	
Step/Pause	[Step/Pause]	
Play 1x	[Play]	
Stop	[Stop]	
Digital Zoon	None	Drag by Left Click
Derived Image	None	[Left click]
1~4/8 Single Channel Display	[1~4/8 Channel]	Select Channel [Double left click]
4/8split Display	[4/8 split]	Under single channel [Double left click]

- Auto Switching
  1. Auto switch starts from order CH1~CH8, 4/8 split channel.
  2. Press the button again to stop the function.

7. Search

In Live mode, use Play button in the front panel/remote controller or right clicking the mouse to switch to the Search function.

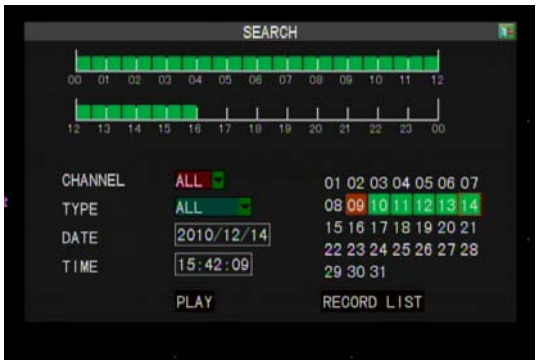

Setup Operation	Front Panel & Remote Controller	USB Mouse
Search	[Enter]	[Left Click]
Select Channel	[Up/Down]	[Moving Cursor]
Select Dates	[Up/Down/Left/Right]	[Moving Cursor]
Playback	[Enter]	[Left Click]
Return to Upper Menu	[MENU]	[Right click] or [Left click]

- No data: no color, data of alarm trigger: red color, normal record data: green color.
- Select the first half of hour frame under the date, the playback will start from 00 mins: 00 sec. Select the second half of hour frame under the date, the playback will start from 30mins:00sec. If there is no data on the date, please try to search from record list.

- Select any of 4/8 channels to playback.

4CH DVR

8CH DVR

■ Record List

Setup Operation	Front & Remote Controller	USB Mouse
Enter Select Item	[Enter]	[Left Click]
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Return to Upper Menu	[MENU]	[Right click] or [Left click]
First Page		
Previous Page		
Next Page		
Last Page		
Mark all the events in this page		
BackUp		

◆ List all of recording data and click on one of record data to playback.

◆ Backup
Please click “BACKUP” to backup the selecting file to USB memory stick.

8. Main Menu

Setup Operation	Front Panel & Remote Controller	USB Mouse
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Item	[Enter]	[Left Click]
Exit Main Menu	[MENU]	[Right click] or [Left click]

8.1 Camera Setup

- Channel
  Select one channel to set. Use CopyButton to copy present settings to other channels.
- Camera Title
  Set the title of camera. Key in by using virtual keyboard.
- Title Position
  Set the title position. Set: Top Left, Top Right, Bottom Left, Bottom Right and Off.
- Display
  Display the channel, set: On/Off
- Camera Color Setup

  - Hue: 0~50
  - Brightness: 0~50
  - Contrast: 0~50
  - Saturation: 0~50

- PTZ Setting

  - Type
    Speed dome model type. Set: PTC-301, PTC-203ST, FUM 626, JG_QG988, FUM 622SD, FUM 628 or off. Please select the correct communication protocol if you enable this setting.

- Protocol
  Speed dome protocol. Set: PELCO P, PELCO D, MIKAMI or off.
- Address
  Speed dome address. Set: 0~255
- Baud Rate
  Speed dome baud rate. Set: 1200, 2400, 4800, 9600, 19200.
- Tour Time
  Speed dome tour time. Set: 5, 10, 15, 20, 25 sec or off.
- Tilt Opposite
  Set speed dome image upside down. Set: On/Off
- Preset

Setup Operation	Front Panel & Remote Controller	USB Mouse
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Item	[Enter]	[Left Click]
Zoom +,-		
Focus +,-		
Iris +,-		
Adjust Move Speed		
Set PTZ Up/Down/Left/Right		
Start/Stop Auto Tracking		
Number Preset Setting		
This function is preset 95 enter the menu		
Save Preset Setting		
Clear Preset Setting		
Clear All Preset Setting		
Return to Upper Menu	[Right click] or [Left click]	

- Buzzer Duration
  The buzzer ON duration when video loss.
- Alarm Relay Duration
  The Relay ON duration when video loss.
- Time Display
  Display the time in LIVE mode. Values: ON/OFF.

8.2 Record Setup

- Record Enable Setup

  On/Off the channel.

  Watermark: Insert the words of watermark.

4CH DVR

8CH DVR

- Resolution Setup

  NTSC Recording Resolution: 720x480 / 720x240 / 360x240.

  PAL Recording Resolution: 720x576 / 720x288 / 360x288.

4CH DVR

8CH DVR

- Frame Rate Setup

  Setting of Frame Rate: NTSC: 0-30 frames/sec; PAL: 0-25 frames/sec.

4CH DVR

8CH DVR

- Quality Setup
  Setting of recording quality: Values 1-5. The bigger value, the better quality.

4CH DVR

8CH DVR

- Pre Record setting
  Pre Recording time when motion alarm. Values: 0-10 seconds.
- Audio
  On/Off the sound effects.
- Encode Mode
  Encoding of channel. Values: VBR or CBR.
- Record schedule setup
  Always and Schedule Record.
  - Record Schedule

Setup Operation	Front Panel & Remote Controller	USB Mouse
Enter Select Item	[Enter]	[Left Click]
Select Channel	[Up/Down]	[Moving mouse wheel]
Select Time&Date	[Up/Down/Left/Right]	[Click/Drag-draw]
Return to Upper Menu	[MENU]	[Right Click] or [Left Click]

  - Copy
    (1) Select source (2) Select target (3) Press COPY icon to copy.

8.3 Alarm Setup

- Channel
  Select the channel to set. COPY icon can copy the present setting to other channels.
- Mode
  Enable/disable alarm trigger. Set: On/Off.
- Record Duration
  The duration of the recording after triggered: 10, 20… 60 sec.
- Buzzer Duration
  The duration of the buzzer beeping after being triggered: 1, 5, 10, 15, 20, 30 sec.
- Alarm Duration
  Alarm out after alarm triggered: 1, 5, 10, 15, 20, 30 sec.
- Event Popup
  The Duration of single channel display after being triggered: 1, 5, 10, 15, 20 sec or off.

8.4 Motion Detection

- Channel
  Select the channel to set. COPY icon can copy the present setting to other channels.
- Enable
  Enable/disable motion detection for each camera. Set: On/Off
- Sensitivity
  Sensitivity level of motion detection. Set: 1~10. Higher value equal more sensitive.
- Motion Area Setup
  Setup by each small square.

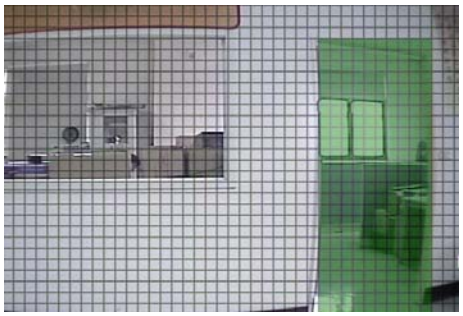

Setup Operation	Front Panel & Remote Controller	USB Mouse
Area Selection	[Up/Down/Left/Right]	[Moving Cursor]
Set Detection Area: must set on none detection area(Transparent Area)	(1)Move to the area (2)Press Enter to set the area	[Drag by Left Click]
Clear Detection Area: clear the set detection area: must set on detection area(Green Area)	(1)Move to the area (2)Press Enter to set the area	[Drag by Left Click]
Return to Upper Menu	[MENU]	[Right Click]

- Record Duration
  The duration of the recording after triggered: 10, 20… 60 sec. or off.
- Buzzer Duration
  The duration of the buzzer beeping after being triggered: 1, 5, 10, 15, 20, 30 sec.
- Alarm Duration
  Alarm out after alarm triggered: 1, 5, 10, 15, 20, 30 sec.
- Event Popup
  The Duration of single channel display after being triggered: 1, 5, 10, 15, 20 sec or off.

8.5 Network Setup

- Mode
  Set the connection method. Set: Static IP, DHCP, PPPoE.
- Media Port
  Port used for stream media. Default is port 9000.
- WEB Port
  Port used for web access. Default is port 80.
- Command Port
  Port used for settings. Default is port 8000.
- IP Address

Assigned IP address.

- Netmask
  Assigned net mask
- Gateway
  Assigned gateway
- PPPOE/3G
  - PPPoE: Need account and password for PPPoE.

  - 3G: Need account, password, APN and dial number for 3G.

- DDNS setting

  - DNS1 First Domain Name Server, Default : 168.95.1.1
  - DNS2 Second Domain Name Server, Default :168.95.192.1
  - DDNS
    Enable/disable Dynamic Domain Name server. Values: On, Off.
  - DDNS Server
    DDNS Server, Values: 3322, dyndns, cctvdvr.
    When using DDNSserver, server name and account/password are required.

- E-Mail Setting

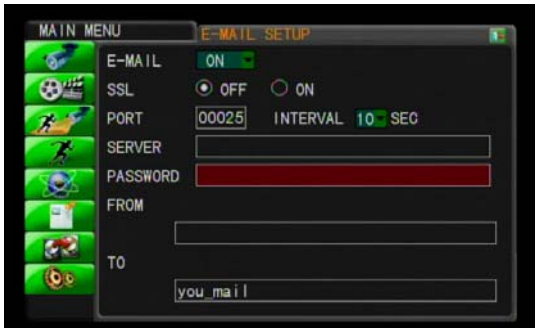

  - E-MAIL
    Forward E-mail after alarm triggered. Enable: On/Off
  - SSL
    Enable the SSL encryption. Recommend to set on if it is using gmail.
  - Port
    SMTP port number key in. For example, gmail port 465.
  - Server
    SMTP server key in. For example, gmail: smtp.gmail.com
  - Password
    Sender E-mail account password
  - From
    Sender E-mail address key in. For example,
    gmail: mail1@gmail.com
  - To
    Receiver E-mail address key in. For example,
    gmail: mail2@gmail.com
  - Interval
    When alarm keeps going, the time span to send E-mail. Values: 10, 30, 60 seconds.

8.6 Log Search

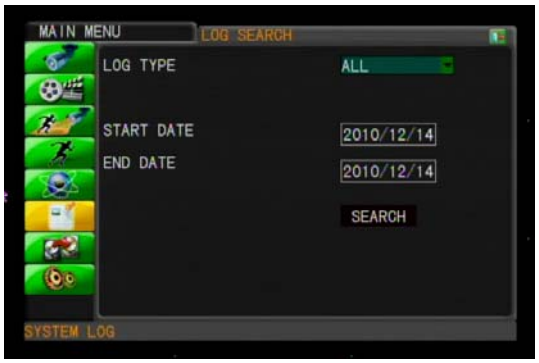

- Log type
  Set conditions for searching: type and time range. Log type can be ALL, Alarm, Operation, Motion Detection, and Video Loss.
- Start/End time
  Set the search range (Year/Month/Day). Press [SEARCH] to search.

MAIN MENU
LOG LIST
TYPE INFO TIME POINT RECORD
OP WATCHDOG 10-12-14 10:28:32 NO
OP BOOT 10-12-14 10:28:43 NO
ALARM VL 10-12-14 10:28:43 NO
ALARM VL 10-12-14 10:28:43 NO
ALARM VL 10-12-14 10:28:43 NO
ALARM VL 10-12-14 10:28:43 NO
OP NETWORK 10-12-14 10:28:54 NO
OP UPGRADE 10-12-14 10:54:31 NO

Setup Operation	Front & Remote Controller	USB Mouse
Enter Select Item	[Enter]	[Left Click]
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Return to Upper Menu	[MENU]	[Right click] or [Left click]
First Page		
Previous Page		
Next Page		
Last Page		
Backup to USB disk		

★ When Trigger Recording is marked, click to playback.

8.7 Backup

- Channel
  Backup all channels or single channel 1-4/8.
- Record Type
  Select all, normal or alarm.
- Start/End time
  Select the backup range of time. Press Search to start searching. The record list will be shown if available and follow [Record list] to backup.

Storage Device Choose

8.8 System

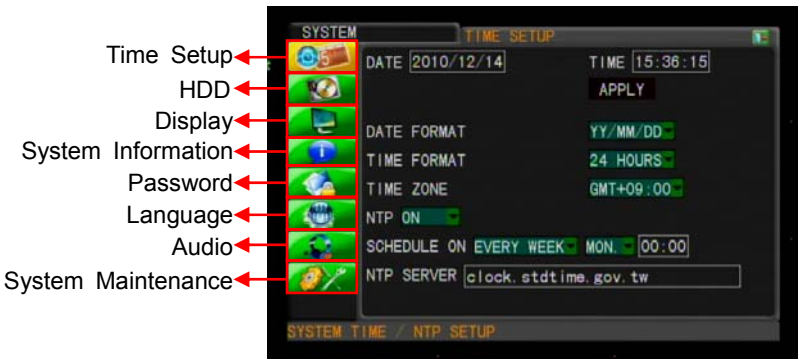

8.8.1 Time Setting

- Date/Time
  Select by using virtual keyboard.
- Date Format Setup

Set: YY/MM/DD, MM/DD/YY.

- Time Format Setup
  Set: 24Hours, 12Hours.
- Time Zone Setup
  Time Zone setting of DVR.
- NTP Setting（Network Time Protocol）
  NTP: On or Off
  Schedule Time: Using virtual keyboard
  NTP server: Using virtual keyboard

8.8.2 HDD Setup

- Format

  Format the selected HDD
  Format HDD

- Overwrite
  Enable/Disable Overwrite, Values: On/Off.
  If Overwrite is enabled, the period can be set as 6, 12, 24, 36, 48, 72 hours and 7, 15, 30, 60 days.
- Pack Time
  Set the required packing time frame to allow the system to pack each saving file under continue recording mode. Pack time setting: 5 min, 10min, 15min, 20min, 30min, and 60min.
- HDD Error Buzzer Enable
  When the hard drive does not have enough space or something wrong, set the buzzer on. Values: On/Off.
- HDD Error Alarm Enable
  When the hard drive does not have enough space or something wrong, trigger the alarm. Values: On/Off.

- USB Disk Info

Format USB Memory Stick

8.8.3 Display Setting

- GUI Display
  GUI display mode can be VIDEO or VGA.
- Video Switching Time
  Set the switching time when switching channels in video mode.
  Values: 1-99 seconds. (0 sec is Off)
- VGA Switching Time
  Set the switching time when switching channels in VGA mode.
  Values: 1-99 seconds. (0 sec is Off)
- Switching Sequence
  Set the switching sequence of channels.

4CH DVR

8CH DVR

- Video Margin
  Set the display margins of the screen. They are Left, Right, Top and Bottom with range between 0 - 36.

- XGA Resolution
  XGA Resolution: 800x600, 1024x768, 1280x1024, 1440x900.

8.8.4 System Information

Provide the firmware version, MAC address, HDD status….

8.8.5 User password

4CH DVR

8CH DVR

- Password Setup
  Enable/Disable password checking. Values: On/Off (Default)
  Administrator account/password can not be blank. And at least 4 characters for the password.
- Administrator account/password
  Administrator account allows user to access all of functions.
- User account/password
  Access rights can be assigned by setting.
- Remote ID setup
  Can adjust remote control ID to control multiple DVR.

8.8.6 System Language

- Language
  Values: Traditional Chinese and English. Auto rebooting after change.
- Function Tip
  Show function tips below the menu items.
  Value: On/Off (Default).

8.8.7 Audio setting

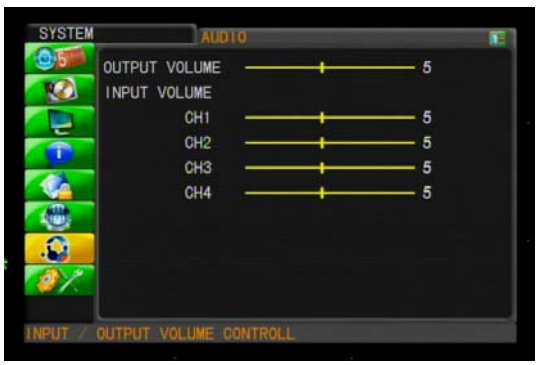

- Audio Volume
  Set the volume of audio In/Out. Values: 1-10. (Default: 5)

8.8.8 System Maintenance

- Auto maintenance: Set time for auto rebooting. Value: On/Off.
  Auto rebooting setting

- F/W update
  Please plug the USB memory stick into the USB port on the DVR rear panel after download the new firmware to the USB memory stick.
  Note: the firmware only can be upgraded by using the USB port. Please don't operate the system, remove the USB memory stick or remove the power while it is in upgrade progressing in order to prevent any serious system error. The system will automatic reboot after upgrade.

- Load Setup Default
  Load factory default. Refer to [Default Setting].

- Reboot the DVR
  Reboot the DVR.
- ShutDown
  System will close the recording file. Please remove the power line manually.

9. Cell Phone Monitoring Operation

■ JAVA Script surveillance:

1. The mobile Phone must support JAVA Script
2. To download the JAVA software: open Internet Browser on the mobile phone, and enter the IP address of the DVR and add /viewer.jar at the end. Example: http://xx.xxx.xxx/viewer.jar.

3. Execute the application

4. Click on “Add” on the drop down menu to add an IP address.

5. Enter the IP address, user name and the password of the DVR and click on “Save”

6. Enter the correct IP address and click on “Open”

7. Click on “Connect” to connect to the DVR.

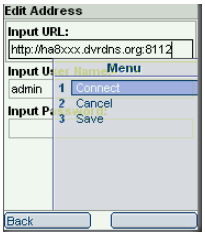

8. Connecting

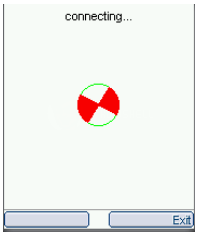

9. Connected

10. If fail to connect, please repeat steps 7 to 9.

Menu	Capture
	Channel[1~4/8]

■ Android Software install/setup procedure

Before the installation, please check the ”Allow Non-market application” or “unknown source” checkbox in your mobile phone< PIC 1~2>.

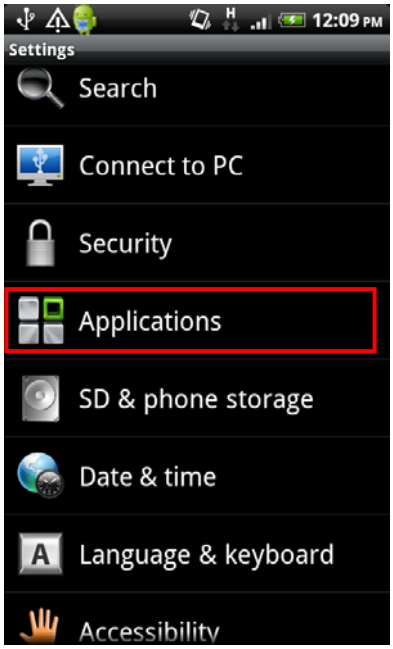

<PIC 1>

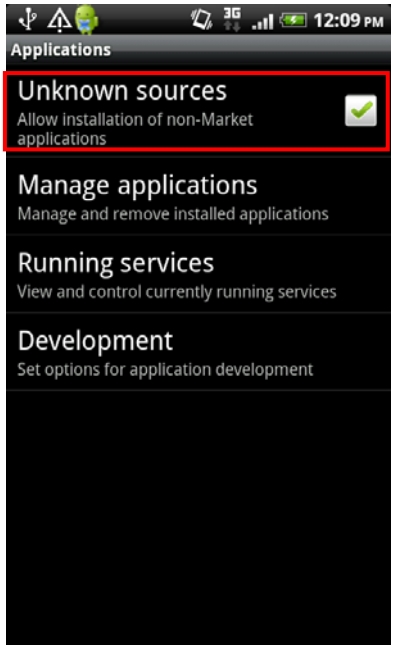

< PIC 2>

First method

1. First, please make sure the PC synchronize software had installed and activated in your Android mobile phone. And connect your android phone to PC via USB.
2. Install “Castillo player” software player to the Android phone through your synchronize software. You may see the example below in the case of HTC.

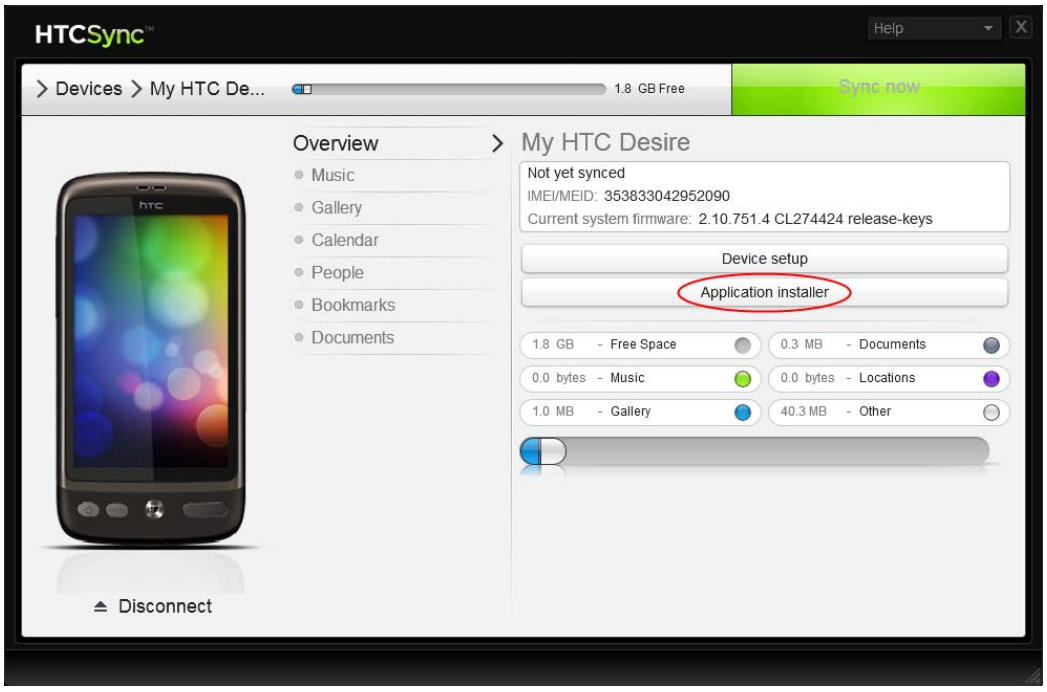

<PIC 3>

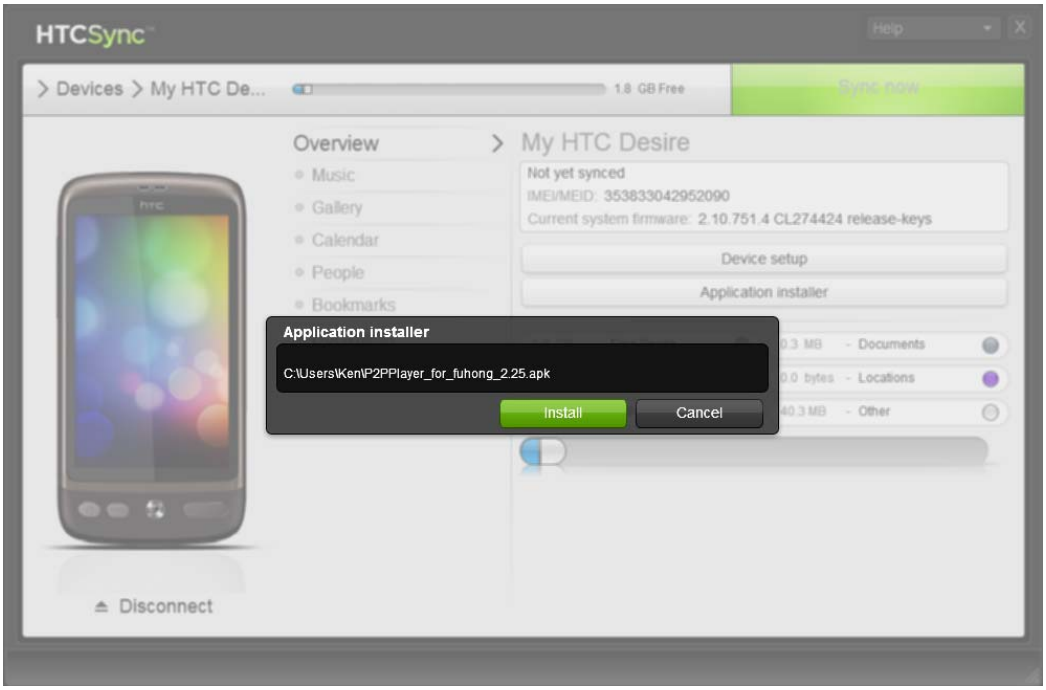

<PIC 4>

Method two

You may copy the APK installation package to your mobile phone or memory card, and then install it through other software.

1. Copy the “Castillo player” software package to your mobile phone through USB or directly to SD memory card.
2. Download the free APK installation software from Market, for example APKinstallerc or AppInstaller, here we use AppInstaller for example<PIC 5~6>.

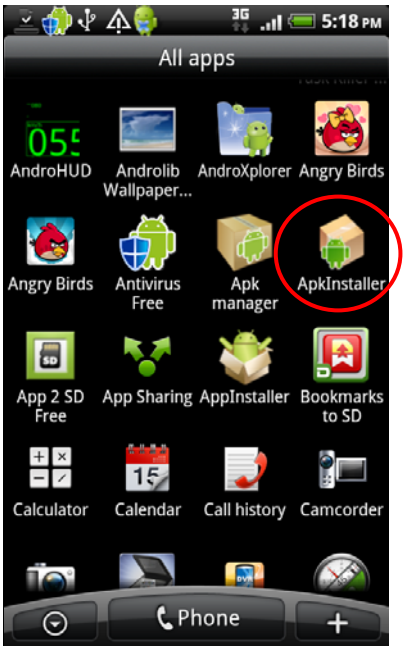

<PIC 5>

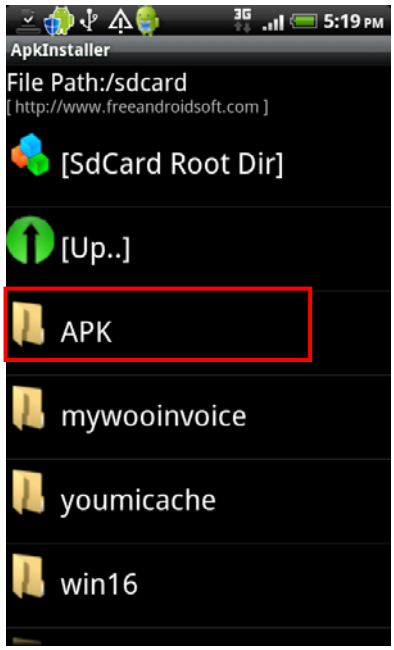

<PIC 6>

3. Run the AppInstaller program, install the APK software package from your SD memory card<PIC 7~8>.

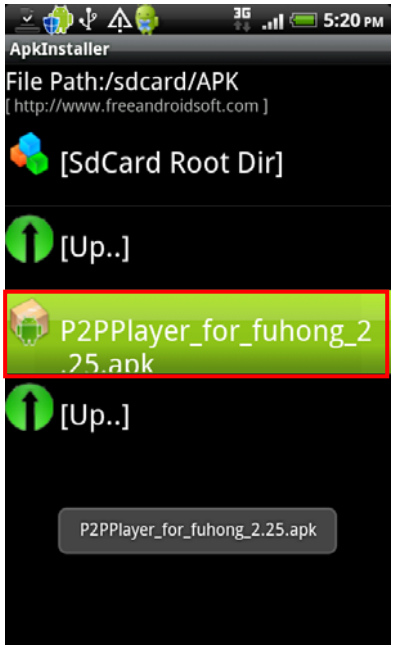

<PIC 7>

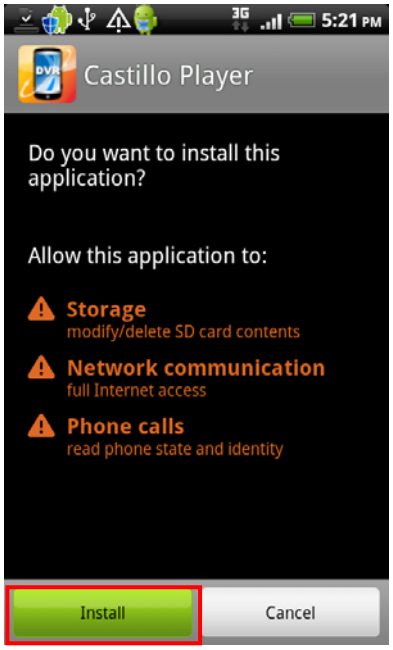

<PIC 8>

4. After the installation, you may find the “Castillo Player” in your program list, click it to run the program<PIC 9>.

<PIC 9>

5. Press the “Setup” button to setup the connection setting <PIC 10>. Enter your individual configuration<PIC 11>.

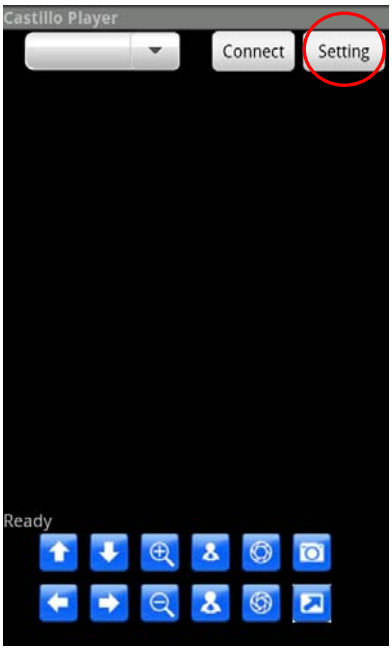

<PIC 10>

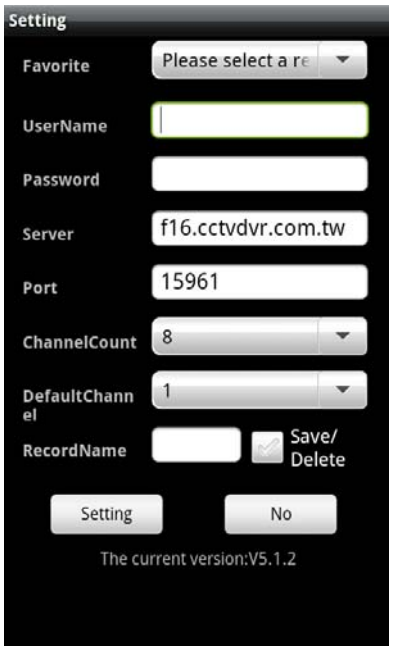

<PIC 11>

6. After setting complete, enter a name you prefer then click the “Add to my favorite” checkbox to save the setting<PIC 12~13>.

<PIC 12>

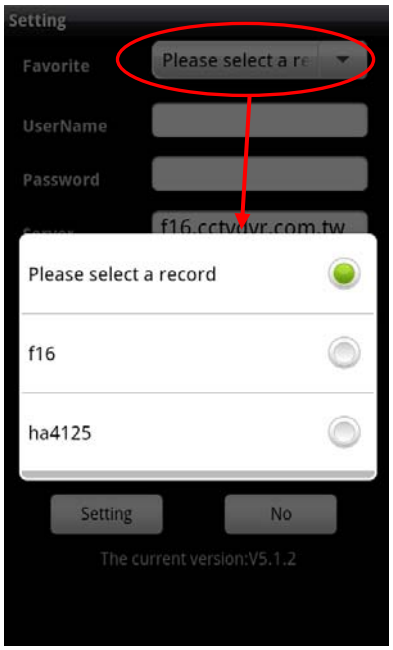

<PIC 13>

7. Press “Connect” button<PIC 14>, it’ll connect to the DVR according to your setup, and you may see the DVR picture after the connection established<PIC 15>.

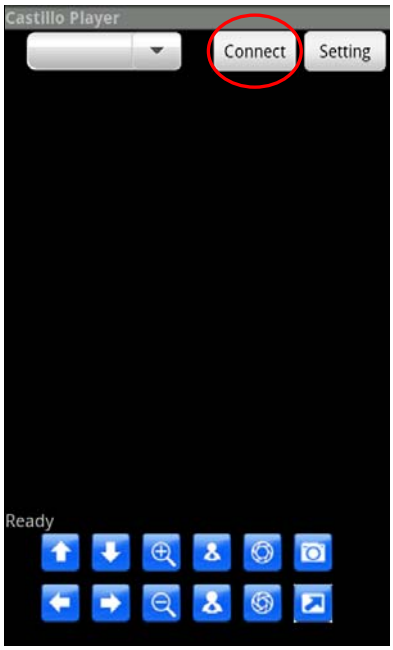

<PIC 14>

<PIC 15>

8. <PIC 16>Operate instruction below:

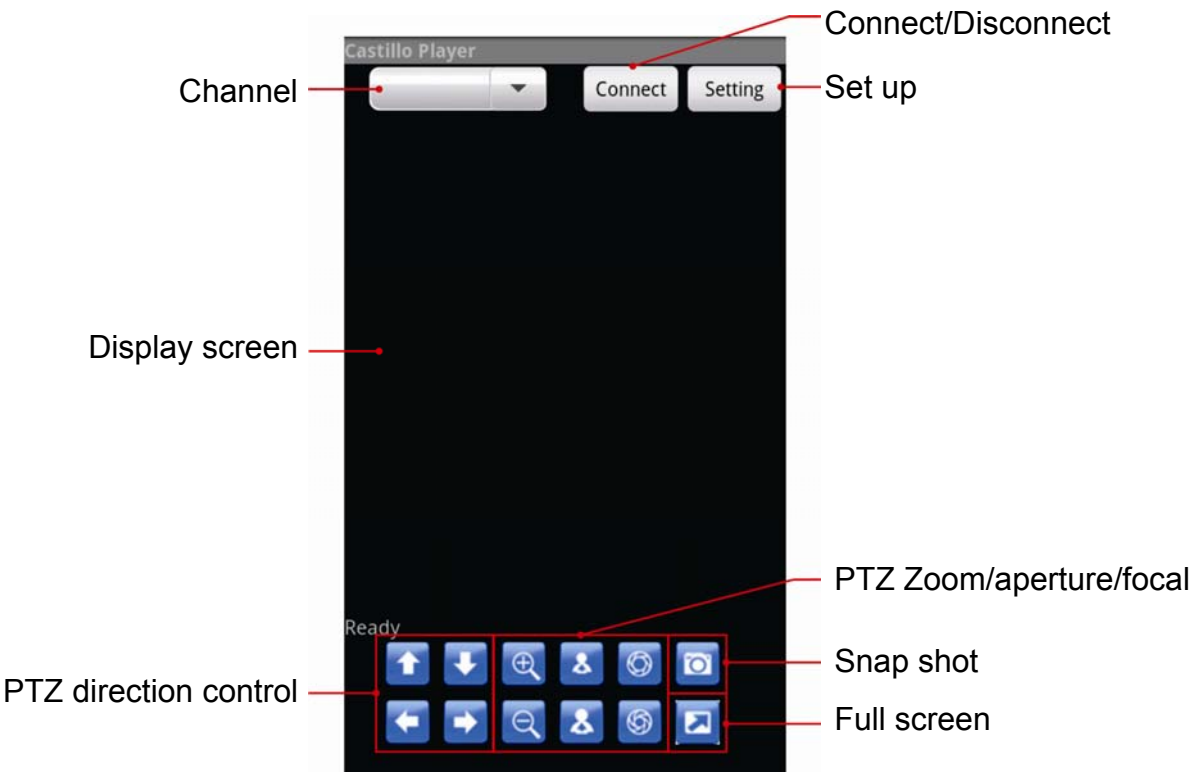

<PIC 16>

■ iPhone software install/setup procedure

1. Download the “Castillo player” in AppStore then install it to your IPhone.
   <PIC 1~6>

<PIC 1>

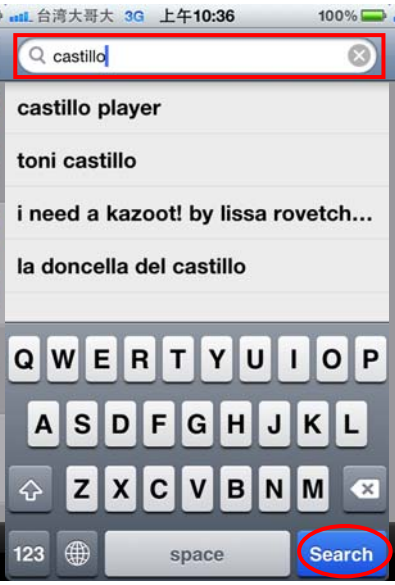
台湾大哥大 3G 上午10:36 100%
castillo
castillo player
toni castillo
i need a kazoot! by lissa rovetch...
la doncella del castillo
Q W E R T Y U I O P
A S D F G H J K L
Z X C V B N M
123
space
Search

<PIC 2>

<PIC 3>

<PIC 4>

<PIC 5>

<PIC 6>

2. Run the “Castillo Player” after installation<PIC 7>. Press “setup” button to setup the connection setting<PIC 8>. Enter your individual configuration then press “back” button to go back to the main screen<PIC 9>.

<PIC 7>

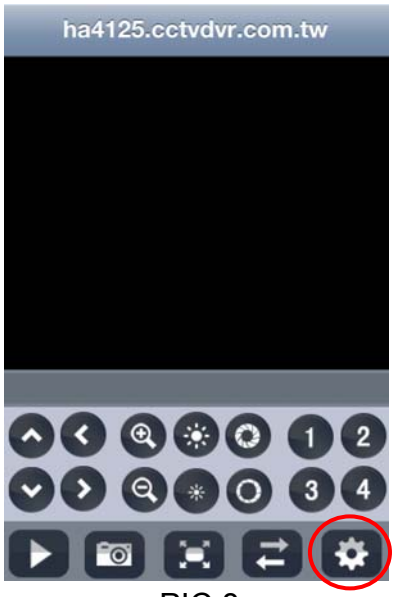

<PIC 8>

<PIC 9>

3. Press “Play” button, then you may see the DVR live view picture after the connection established <PIC 10~11>.

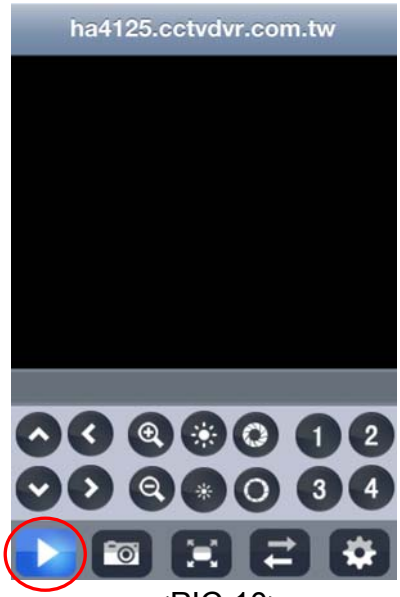

<PIC 10>

<PIC 11>

4. <PIC 12> Operate instruction below:

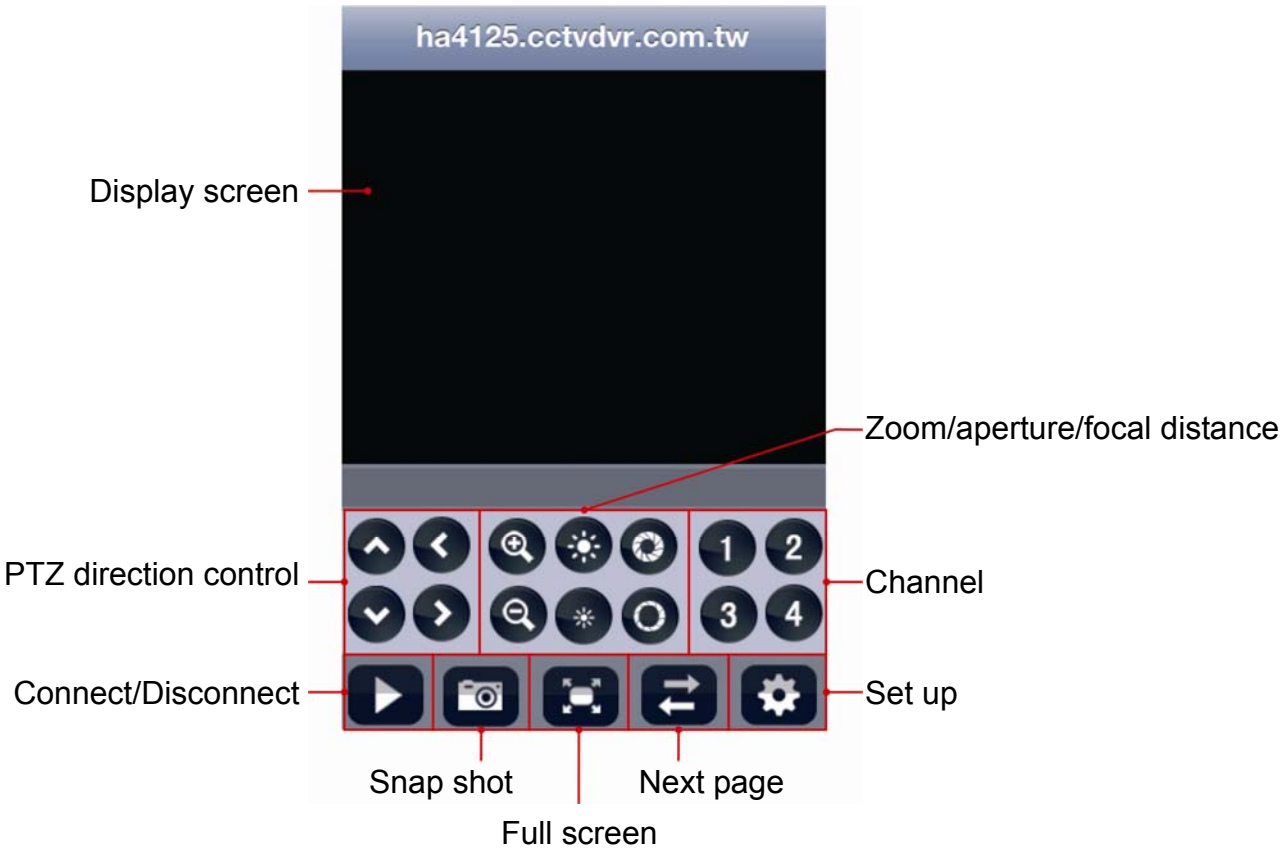

<PIC 12>

■ Symbian Software install/setup procedure

1. Copy the Symbian player to your mobile phone or memory card; you may see the example below in the case of NOKIA. <PIC 1~5>

<PIC 1>

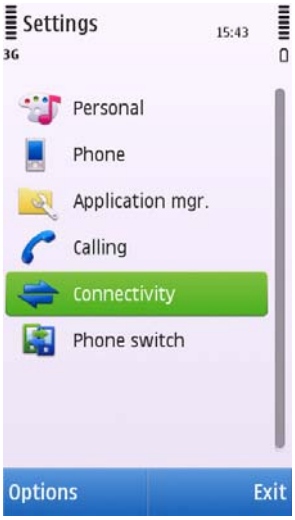

<PIC 2>

<PIC 3>

<PIC 4>

<PIC 5>

2. Connect the mobile phone to PC via USB, copy the live view software to the memory card of your mobile phone <PIC 6>.

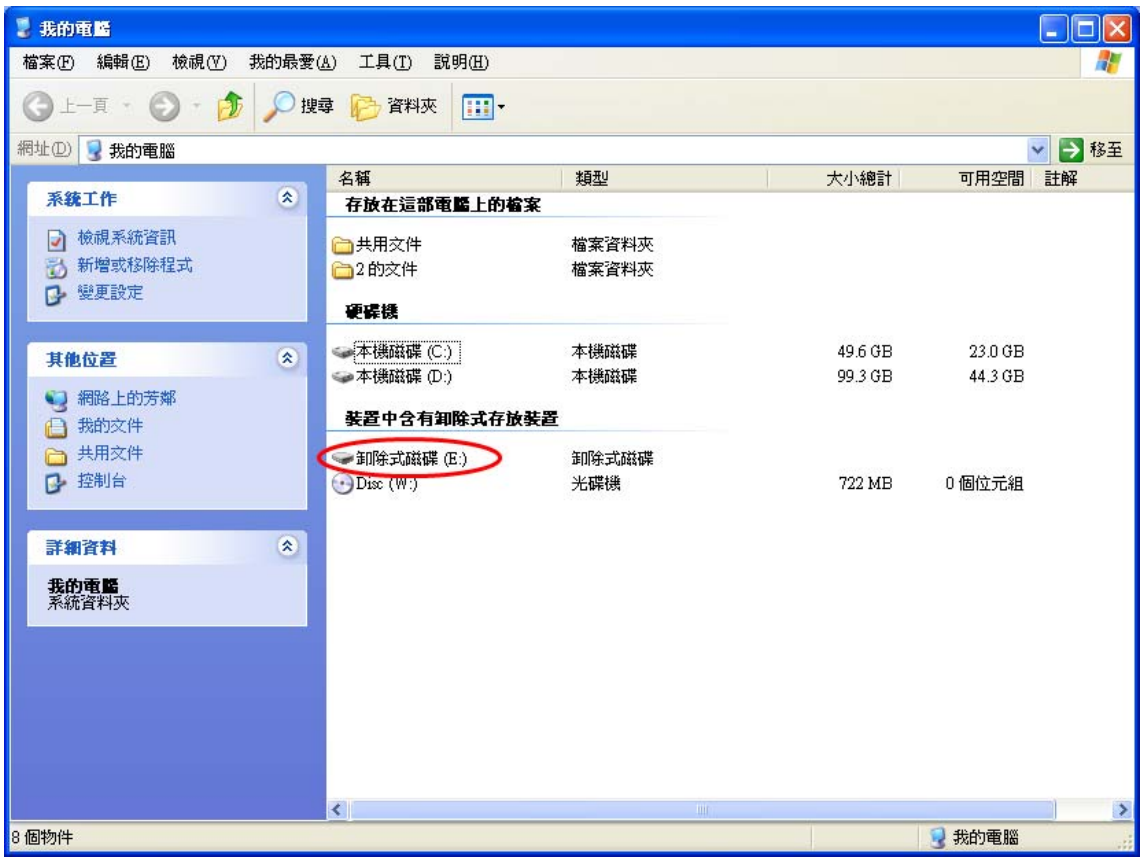

<PIC 6>

3. Before the installation, please make sure you had cancel the “Only Signed Application”, also cancel the “Connection credentials check” <PIC 7~11>.

<PIC 7>

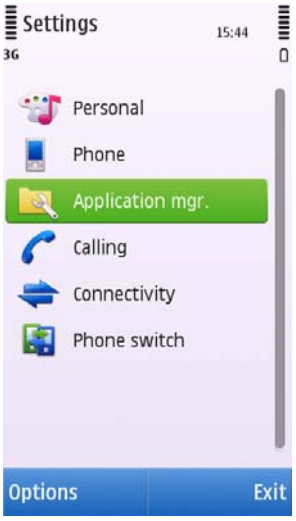

<PIC 8>

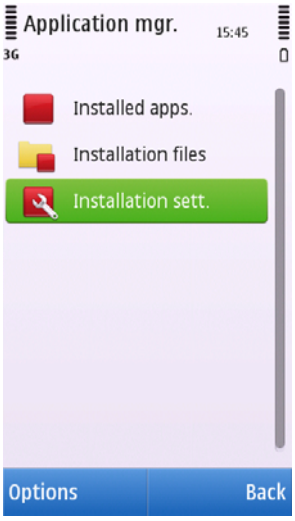

<PIC 9>

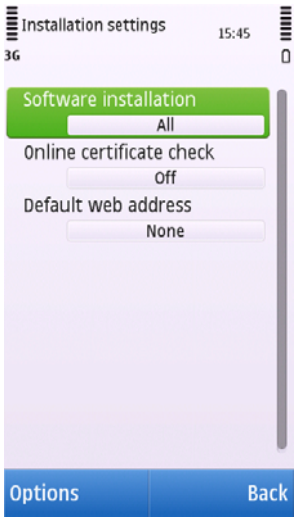

<PIC 10>

<PIC 11>

4. Enter the folder which you'd saved the live view software "fuho_20110221.sisx", double click to install, follow the instruction to proceed <PIC 12~22>.

<PIC 12>

<PIC 13>

<PIC 14>

<PIC 15>

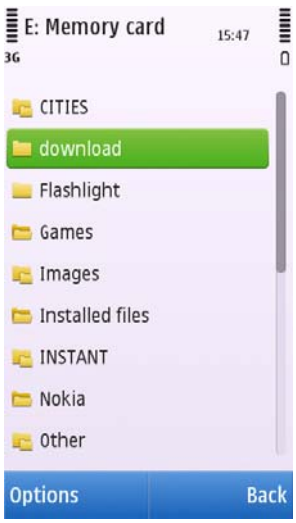

<PIC 16>

<PIC 17>

<PIC 18>

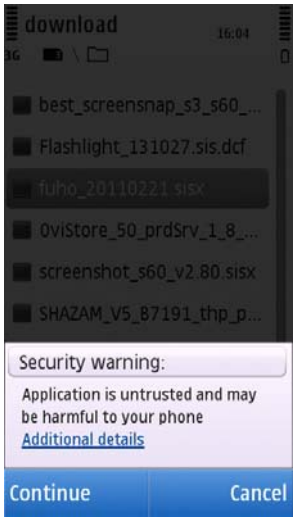

<PIC 19>

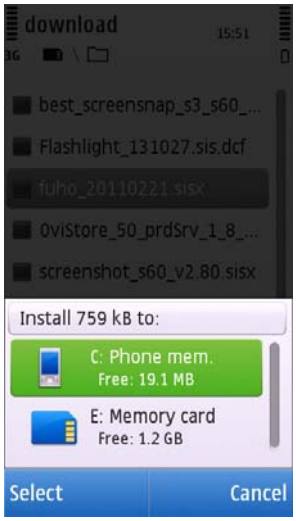

<PIC 20>

<PIC 21>

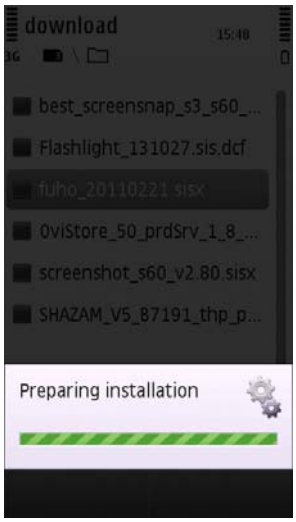

<PIC 22>

5. After the installation, enter the “Installed Application” and you may see the “Castillo Player” inside <PIC 23~25>.

<PIC 23>

<PIC 24>

<PIC 25>

6. Click and run the Castillo Player program <PIC 26~27>.

<PIC 26>

<PIC 27>

7. Press the “Setup” button to setup the connection setting. After setting complete, click the “Add to my favorite” button to save the setting. Press “Connect” button, it’ll connect to the DVR according to your setup <PIC 28~32>.

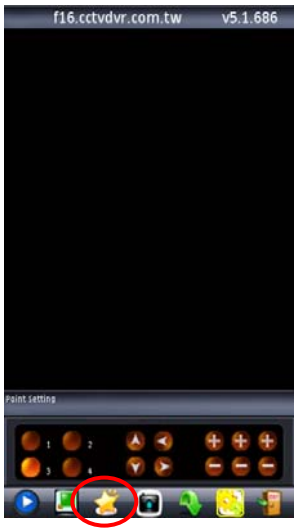

<PIC 28>

<PIC 29>

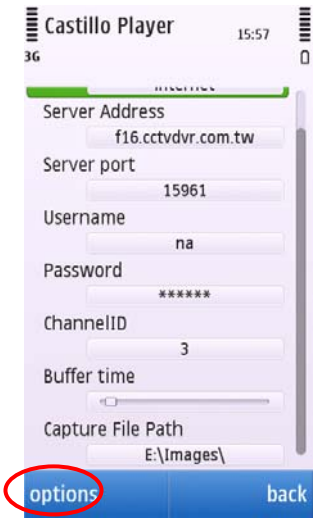

<PIC 30>

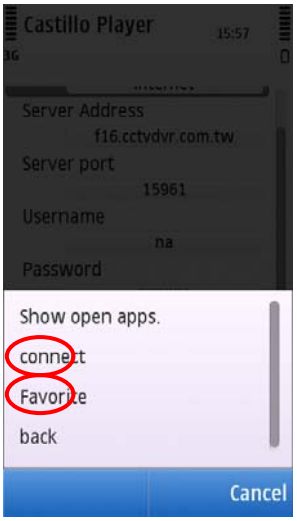

<PIC 31>

<PIC 32>

8. <PIC 33>Operate instruction below:

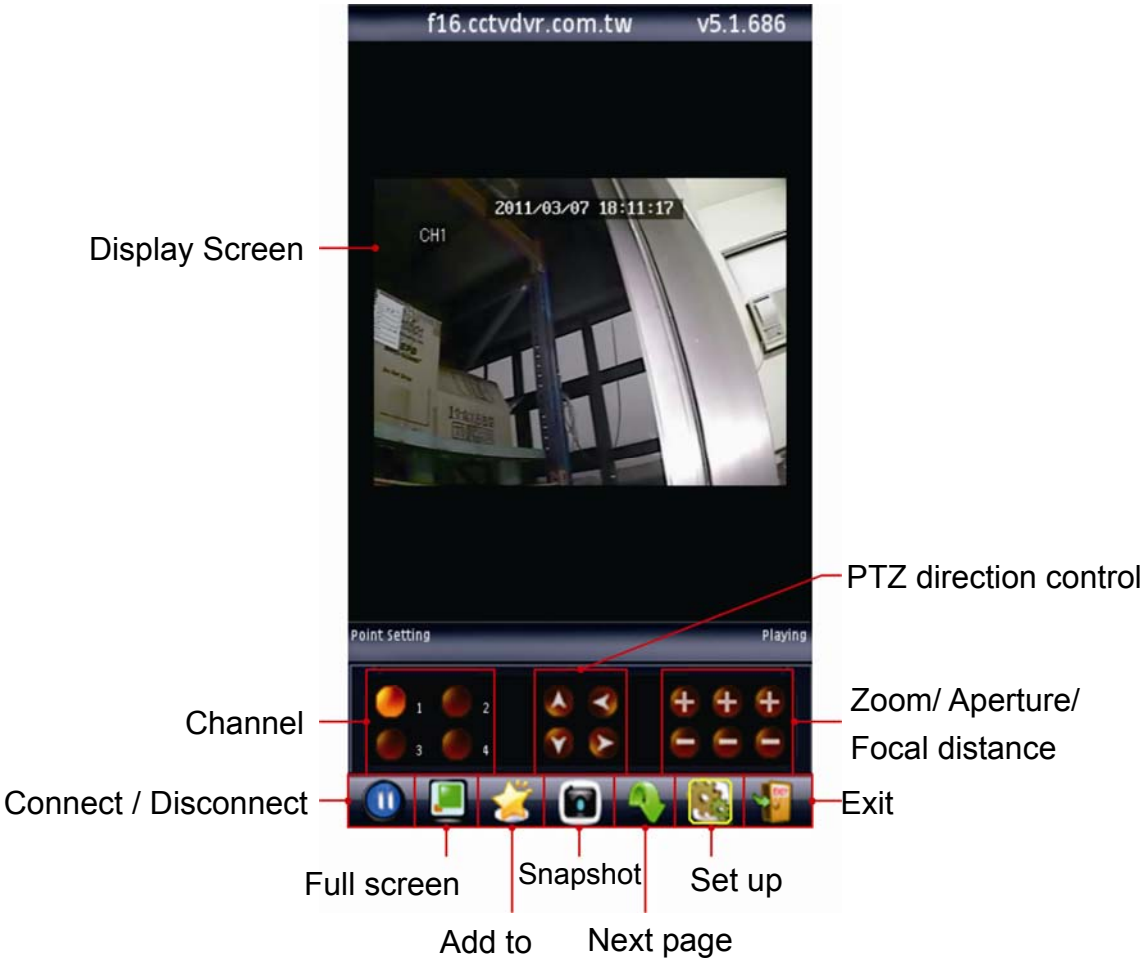

<PIC 33>

■ Windows Mobile Software install/setup procedure

1. Please install “Microsoft ActiveSync” into the PC before installing CAB software.
2. Execute the Microsoft ActiveSync program in your PC first, and connect the Windows Mobile SmartPhone to PC via USB, then it’ll synchronize the SmartPhone and PC.
3. In ActiveSync program, Click “Browse” button to open the mobile device folder <PIC 1>.

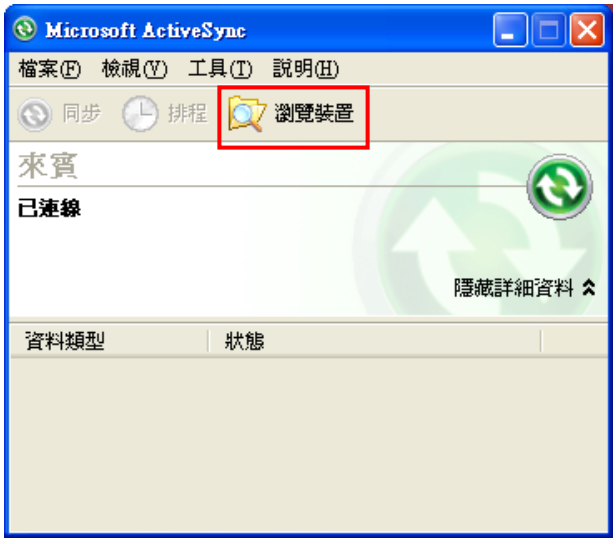

<PIC 1>

4. Copy the .CAB file of Castillo Player to your mobile device folder, or any other folder according to your individual needs <PIC 2>.

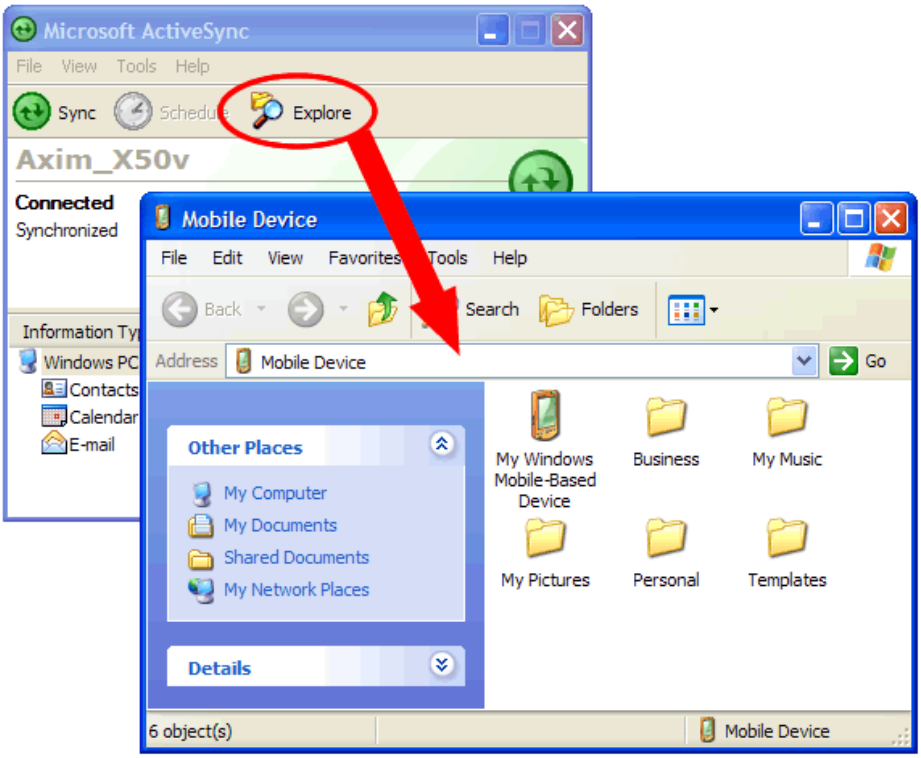

<PIC 2>

5. Please disconnect the SmartPhone from your PC, and begin the installation below:
6. Execute the Castillo Player CAB install package from the File browser, you may find it in your mobile device folder <PIC 3~5>.

<PIC 3>

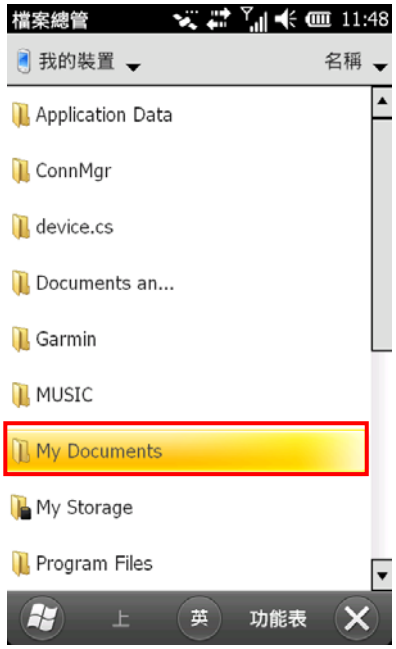

<PIC 4>

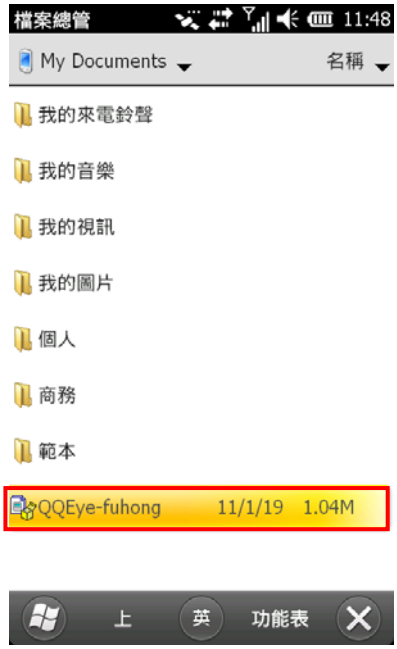

<PIC 5>

7. Double click and it'll begin the installation, follow the instruction for setting up. After the installation, you may find the "Castillo Player" in your program <PIC 6~10>.

<PIC 6>

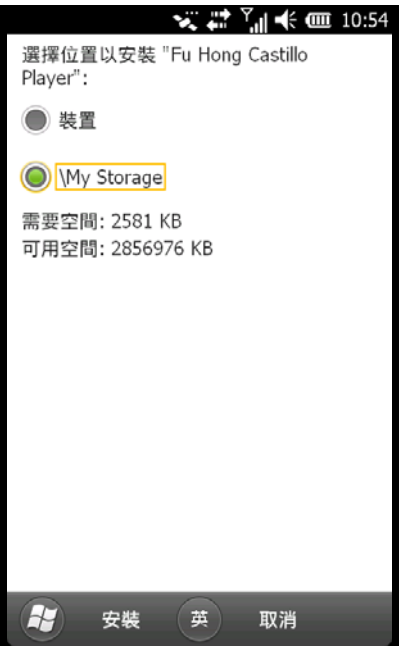

<PIC 7>

<PIC 8>

<PIC 9>

<PIC 10>

8. Run the Castillo Player program, press the “Setup” button to setup the connection setting. After setting complete, enter a name you prefer then click the “Add to my favorite” checkbox to save the setting. Press OK and Leave to go back to the main screen <PIC 11~14>.

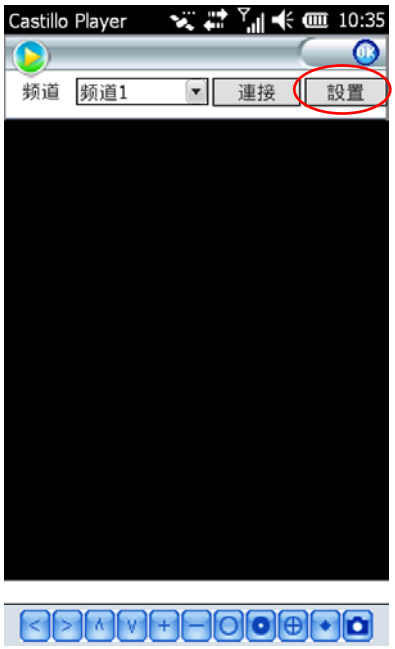

<PIC 11>

<PIC 12>

<PIC 13>

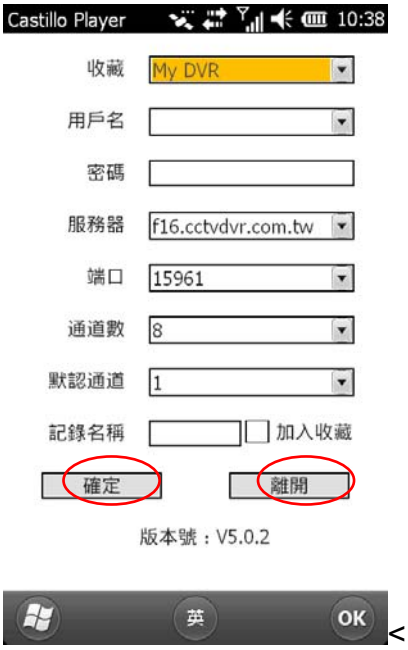

<PIC 14>

9. Press “Connect” button, it’ll connect to the DVR according to your setup, and you may see the DVR picture after the connection established <PIC 15~16>.

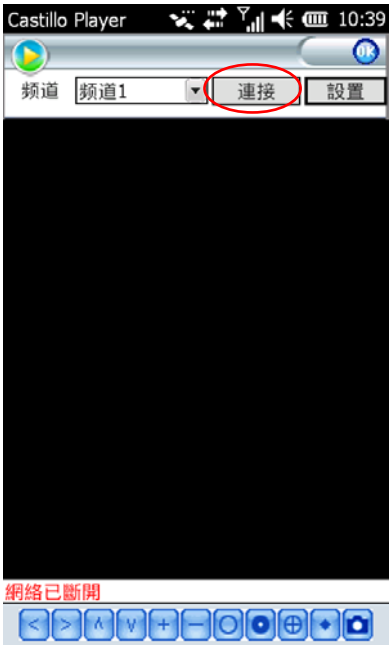

<PIC 15>

<PIC 16>

10. <PIC 17>Operate instruction below:

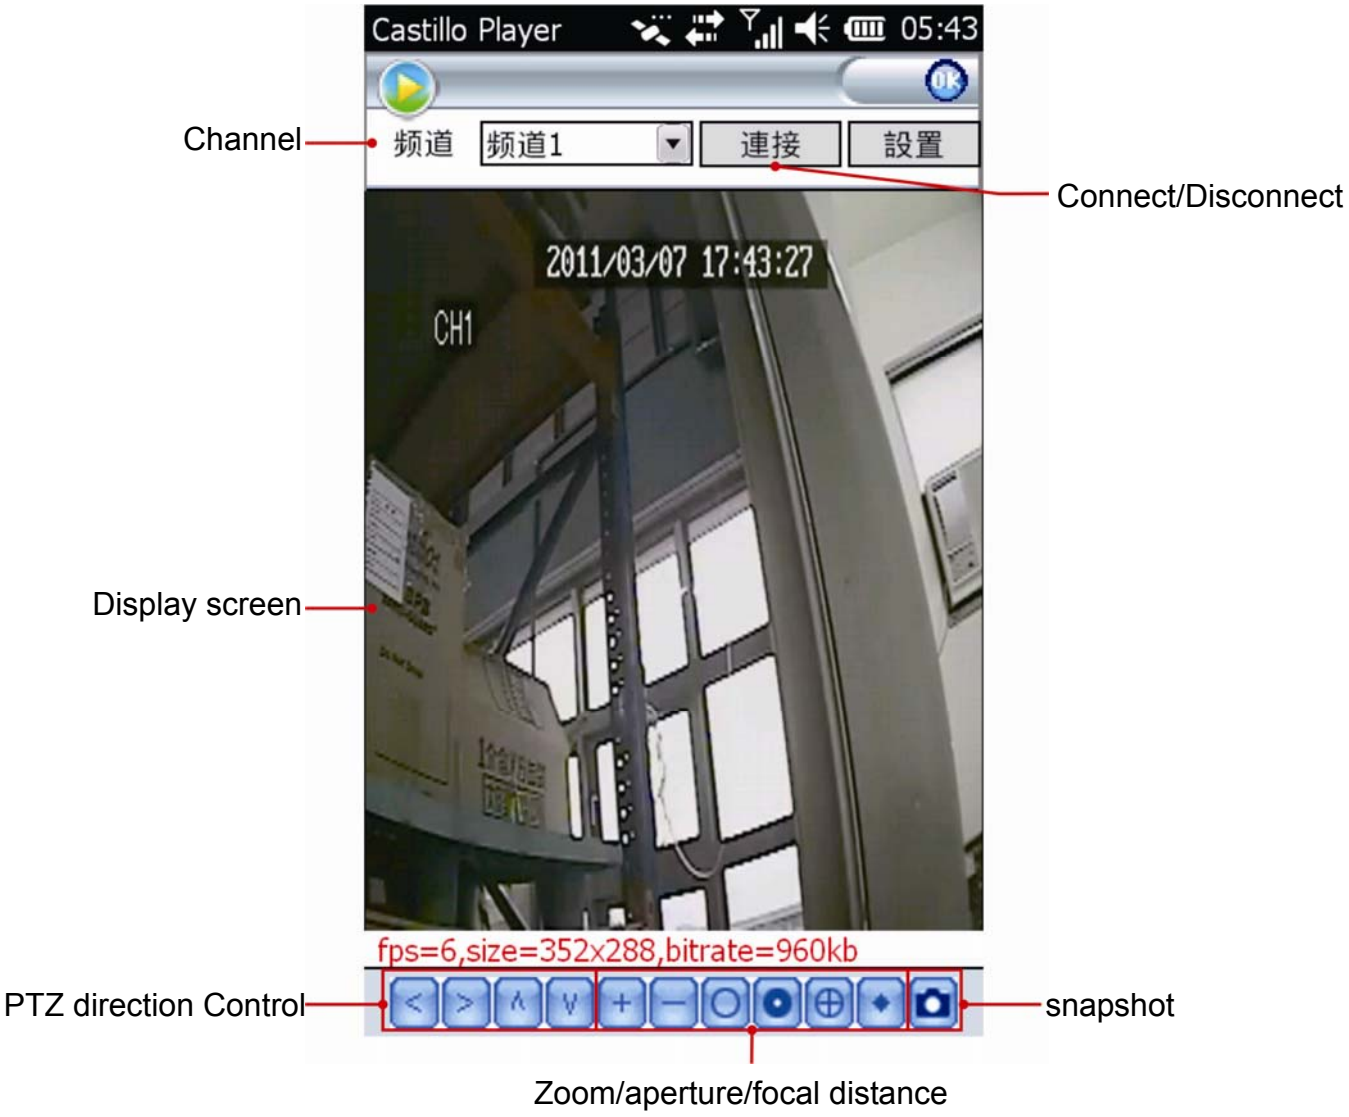

<PIC 17>

■ Operation system for mobile phone application

O/S	Version
Android	2.1.& 2.2 & 2.3
iPhone	3GS & 4
Symbian	S60 v3 above (version V5 above recommended)
WinM	6.5

10. H264Player Operation

- Preface
  H264Player software allows to playback the backup saving file from the DVR.
- System Requirement
  Operating System: Windows 2000, XP, Vista, Windows 7.
- Program obtainment and installation
  While user start to backup the file from DVR, the system will automatically copy the H264Player.exe file and recorded data to the backup device for example, an USB flash memory stick.
  - Execute the installation file

    Step 1: Ask for the Installation

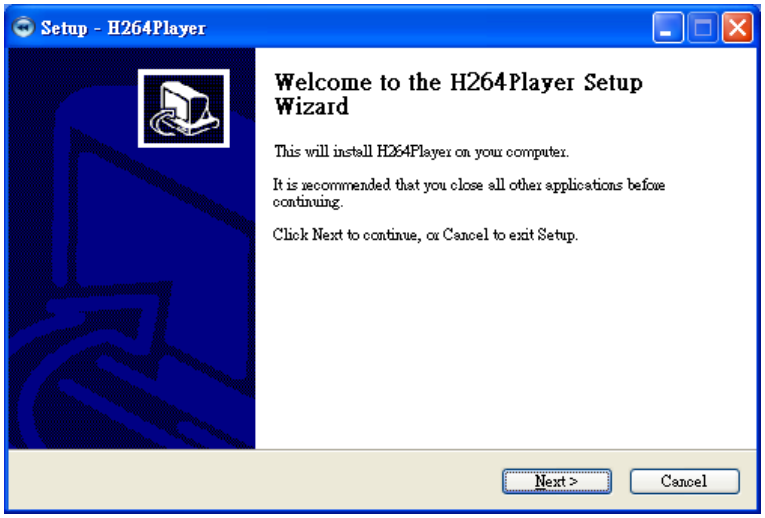
Setup - H264Player
Welcome to the H264Player Setup Wizard
This will install H264Player on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

    Step 2: Select the Install Location

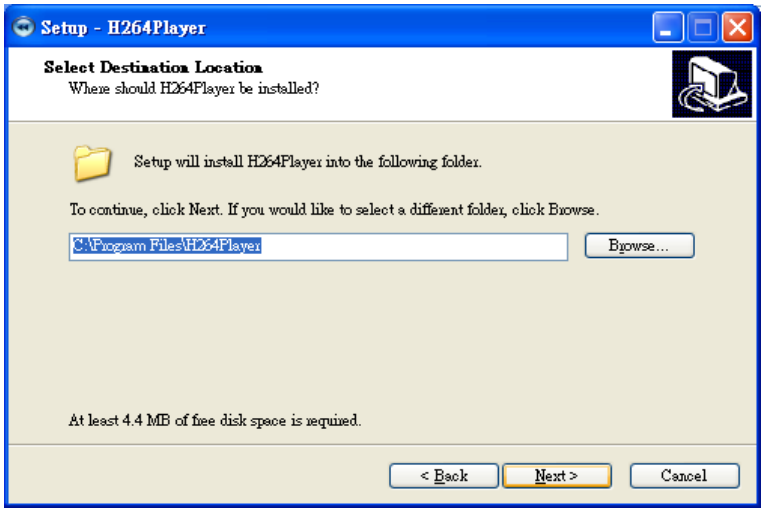
Setup - H264Player
Select Destination Location
Where should H264Player be installed?
Setup will install H264Player into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Program Files\H264Player
Browse...
At least 4.4 MB of free disk space is required.
< Back
Next >
Cancel

Step 3: Select Additional Tasks

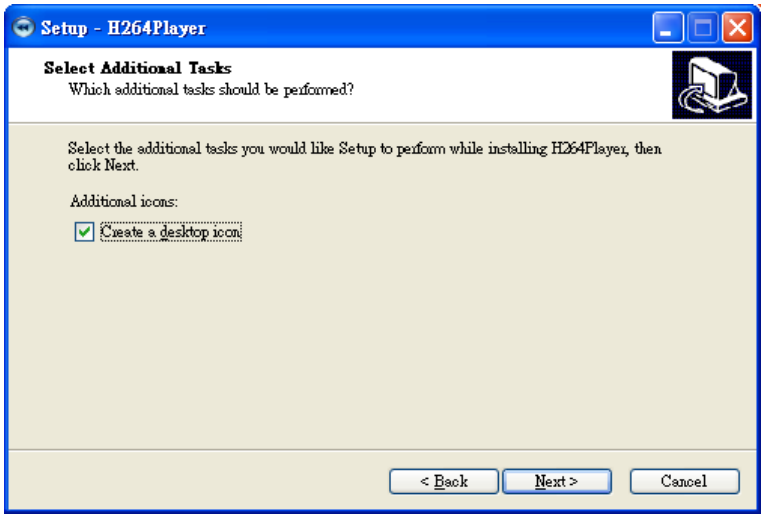
Setup - H264Player
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing H264Player, then click Next.
Additional icons:
Create a desktop icon
< Back
Next >
Cancel

Step4: Install Confirmation

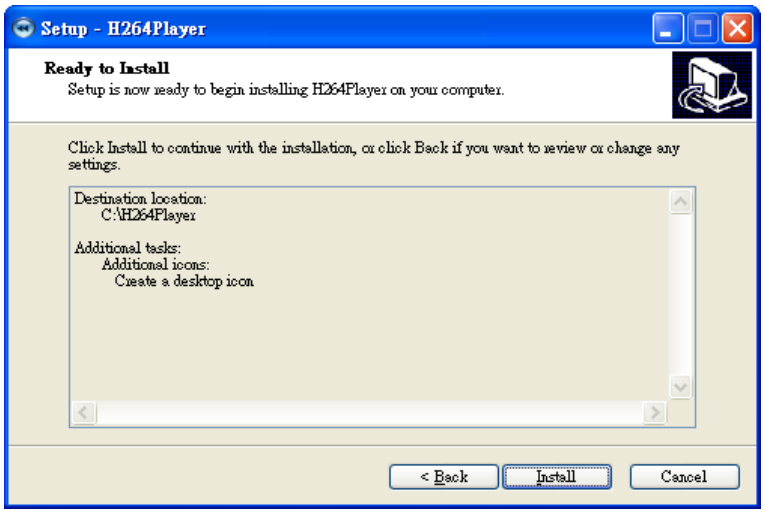
Setup - H264Player
Ready to Install
Setup is now ready to begin installing H264Player on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:\H264Player
Additional tasks:
Additional icons:
Create a desktop icon
< Back
Install
Cancel

Step 5: Installation Complete

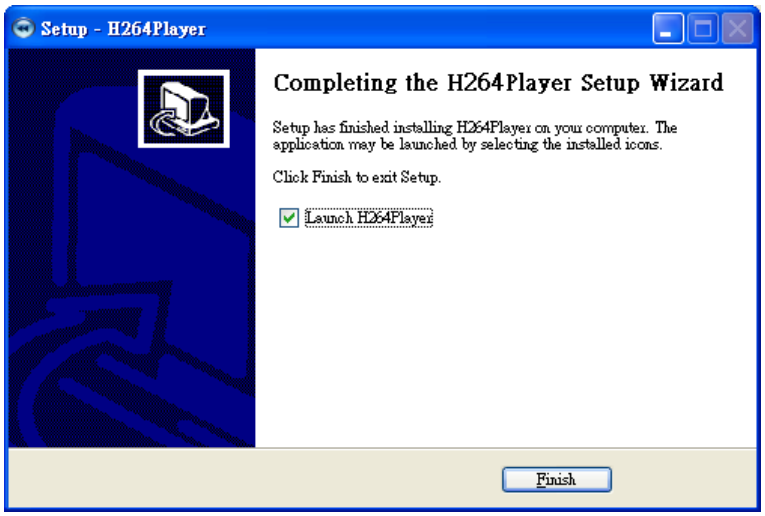
Setup - H264Player
Completing the H264Player Setup Wizard
Setup has finished installing H264Player on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Launch H264Player
Finish

◆ User Interface

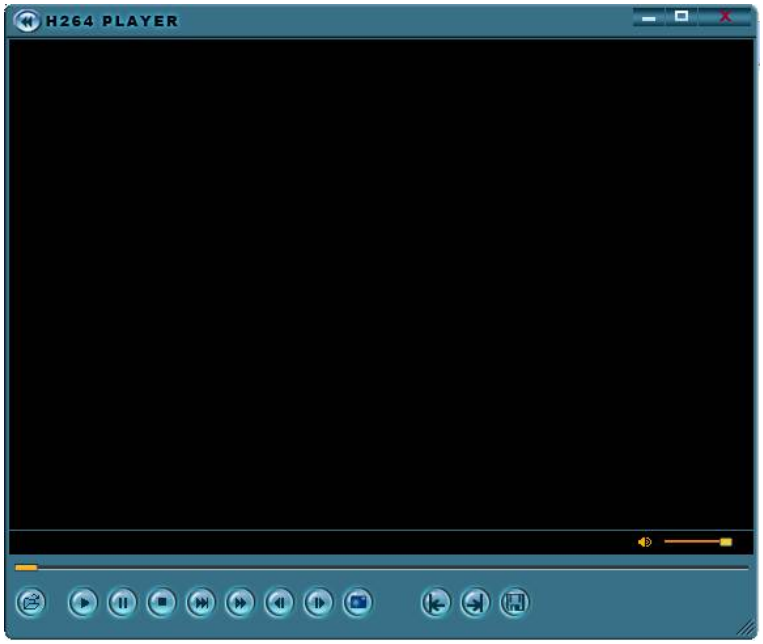

Open File	Click
Pause	Click
Stop	Click
Play 1x	Click
Fast Forward	Click
Slow Forward	Click
Capture the image (snap shot) to the host computer	Click
Volume Control	Drag
Rewind	Click
Step Forward	Click
Mark start time	Click
Mark end time	Click
Backup	Click
Pop-up Menu	Right click the mouse to open the pop-up menu including Setting, Language, About H264Player, Exit Setting Language ▶ About H264Player Exit

11. Web Operation

- Preface
  The Web Application Manager allows the user to remotely monitoring, playback, and backup through the DVR.
- System Requirement
  Operating System: Windows 2000, XP, Vista, Windows 7
  Web Browser: Internet Explorer
- Add-on Installation
  Please use the IE browser to login the IP address of DVR setting. If the user is the first time to login the page, the system will ask the user to download and install the add-on as you can see the page below. Please click the request to install the ActiveX add-on.

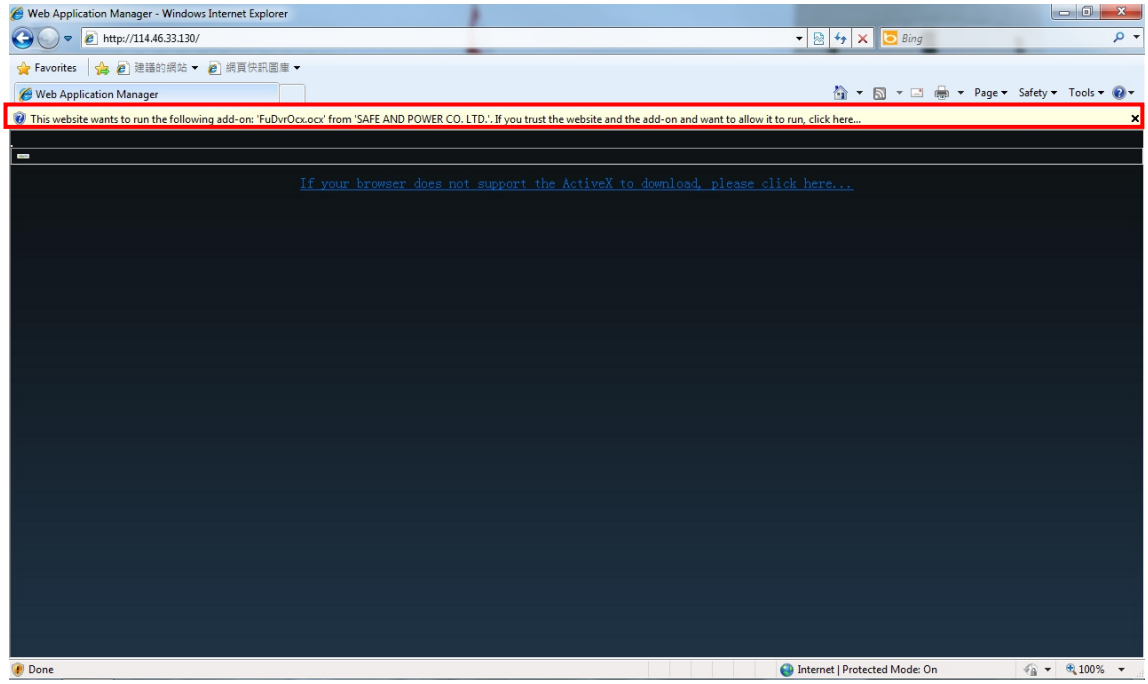
Web Application Manager - Windows Internet Explorer
http://114.46.33.130/
Bing
Favorites
Web Application Manager
Page
Safety
Tools
This website wants to run the following add-on: 'FuDvrOcx.ocx' from 'SAFE AND POWER CO. LTD.'. If you trust the website and the add-on and want to allow it to run, click here...
If your browser does not support the ActiveX to download, please click here...
Done
Internet | Protected Mode: On
100%

- User Interface
  - Login Page

Please login user name and password from the setting of DVR end.

◆ Live mode

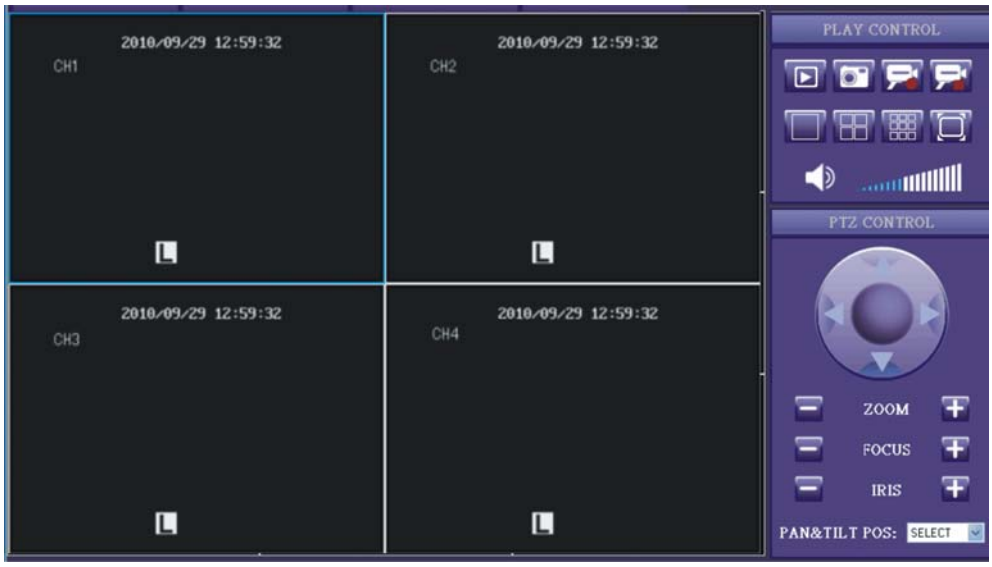

Start/Stop the Live Monitoring	Click
Record the Footage to Computer	Click Start recording or Stop recording (saving path: Setup/Information)
Snapshot the Image	Click to snap shot the image (saving path: Setup/Information)
Enable/Disable Audio	Click under the live viewing mode to enable the audio, and click to disable
Volume Control	Click
Switch Channel Display	Double click the channel to enter single channel display, double click again to return.
Single/4/8 Display	Click
Speed Dome Preset Point	
PTZ Control	Please refer “PTZ” for more information

◆ Playback

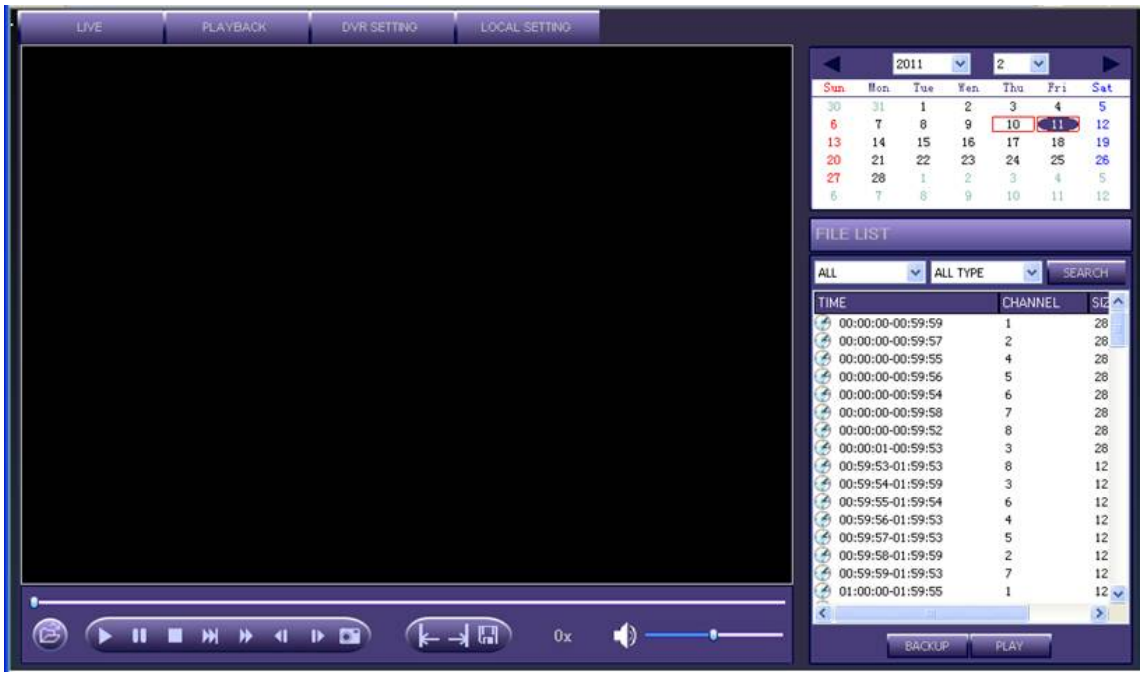

Event Search	(1) Select Date (2)Click ALL or ALL TYPE (3)Click SEARCH
Playback	Click on pop up file list
Fast Forward	Click “Fast Forward” (Speed: 2X, 4X, 8X, 16X)
Rewind	Click “ Rewind” (Speed: 1/2, 1/ 4X, 1/ 8X, 1/ 16X)
Step Forward	Click “Previous”or “Step”
Snapshot	Click to capture.
Mark start time	Click
Mark end time	Click
Backup	Click
Backup	Click “Backup”, backup path: Setup→ System Setting→ Backup Location

◆ DVR Setting

‣ Cameras

Please refer “Camera Setup” for more information

‣ Record

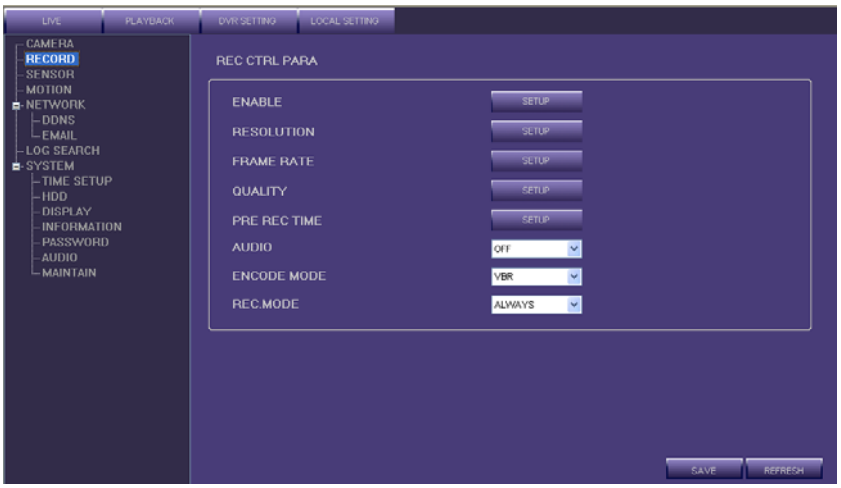

Please refer “Record Setup” for more information.

‣ Alarm

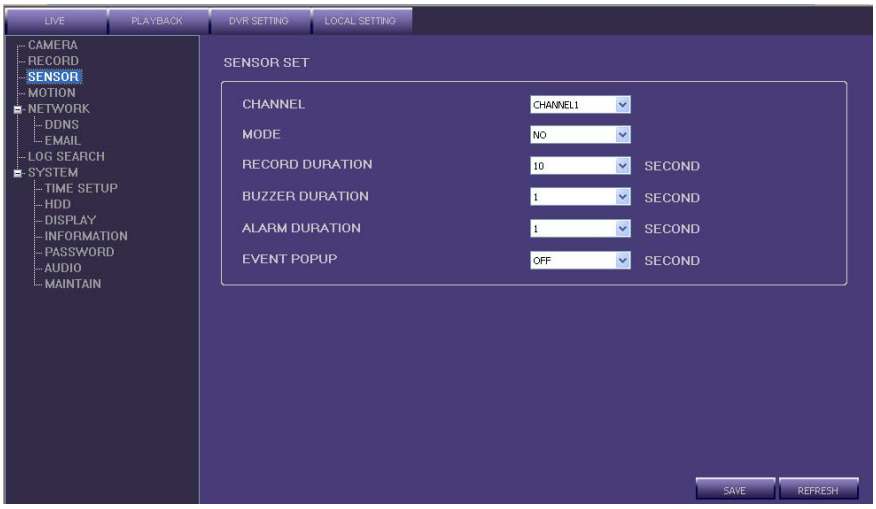

Please refer “Alarm Setup” for more information.

- MotionDetection

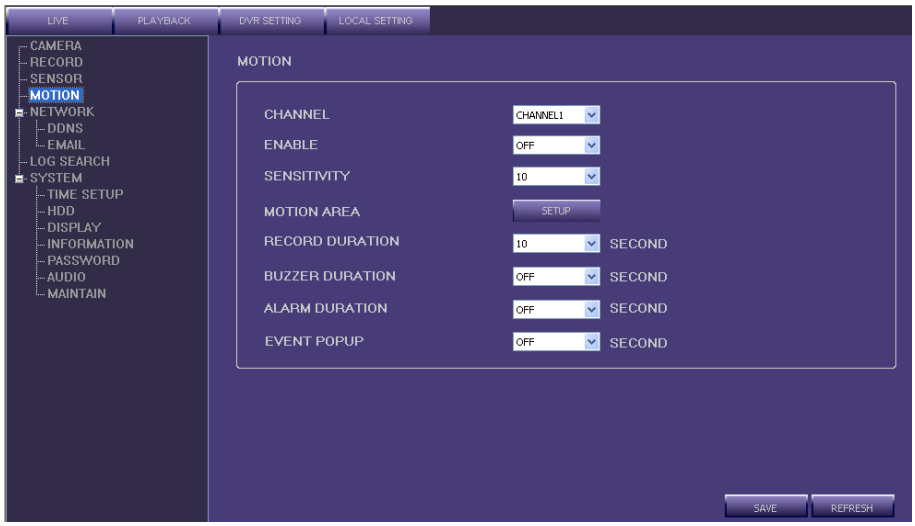

Please refer “Motion Detection” for more information.

- Network setting

E-MAIL

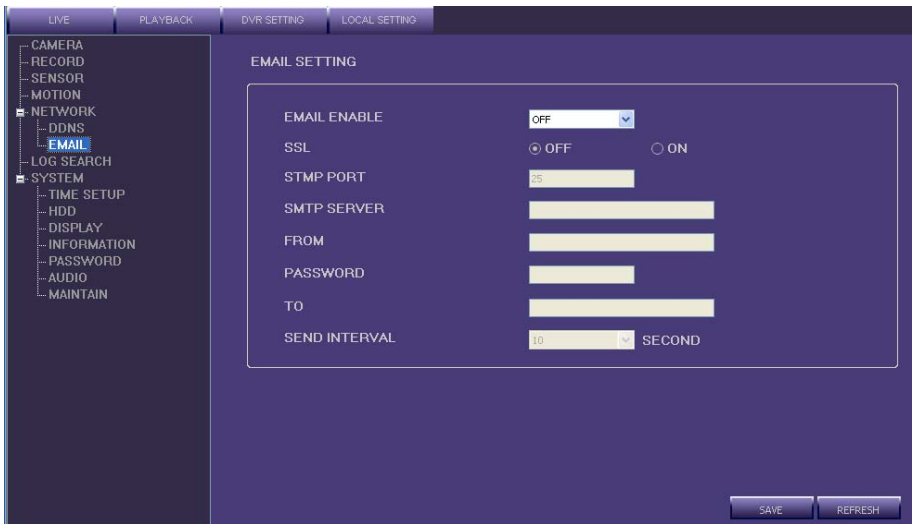

‣ Log search

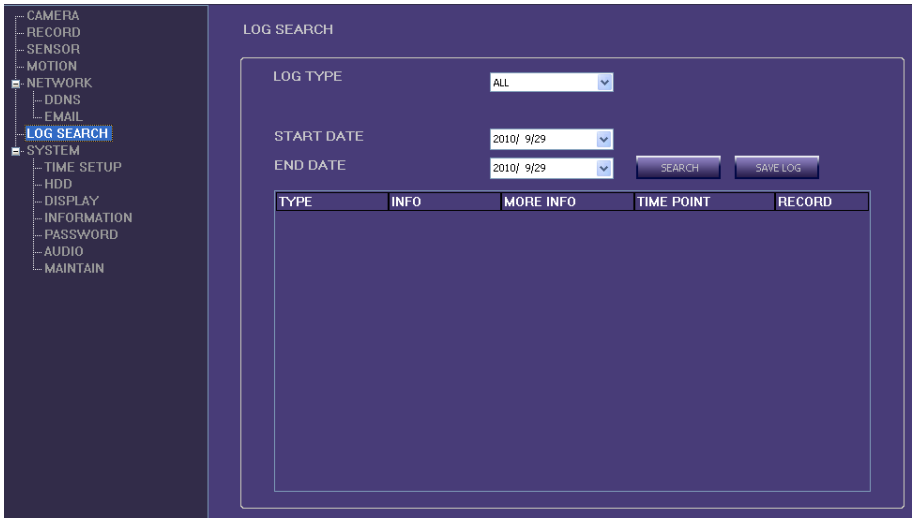

◆ System Setting

‣ Date/Time Setting

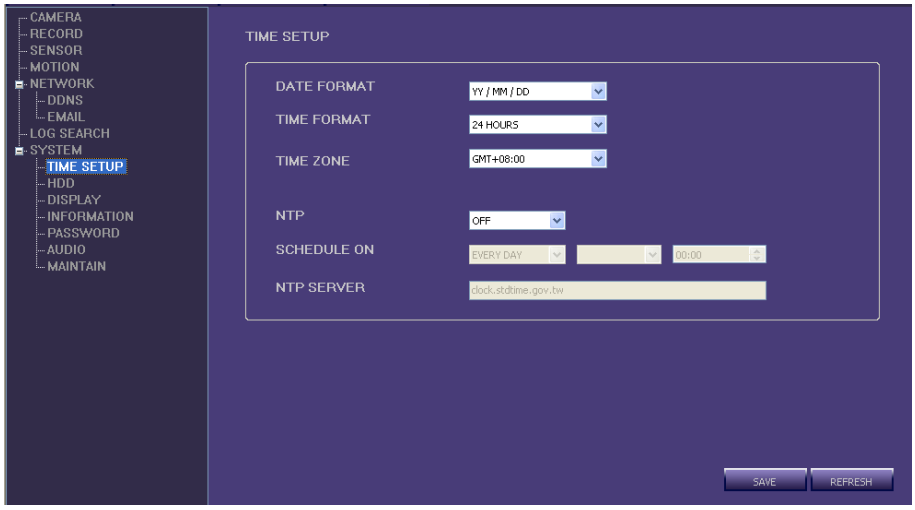

‣ HDD Management

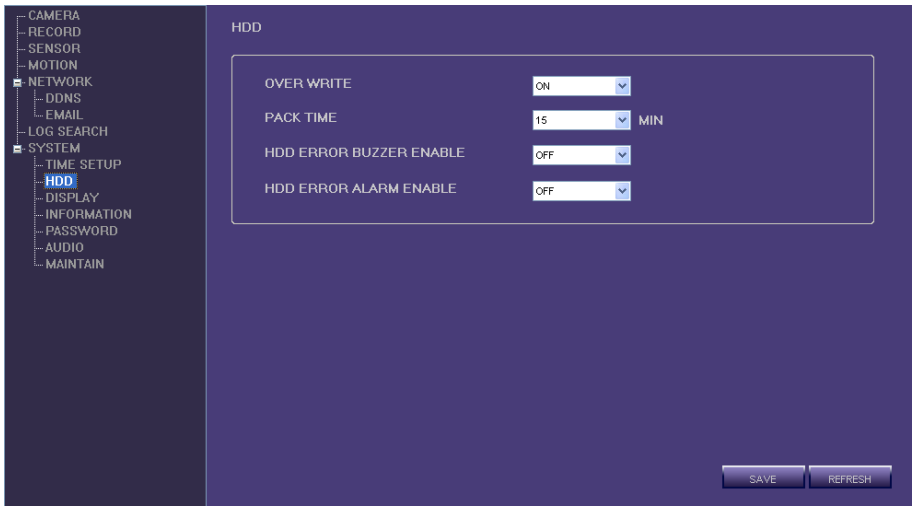

- Display

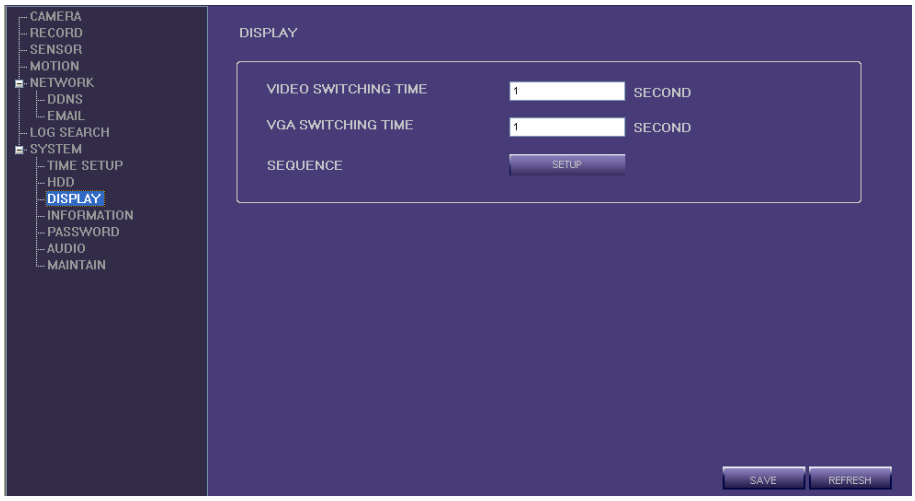

- System Information

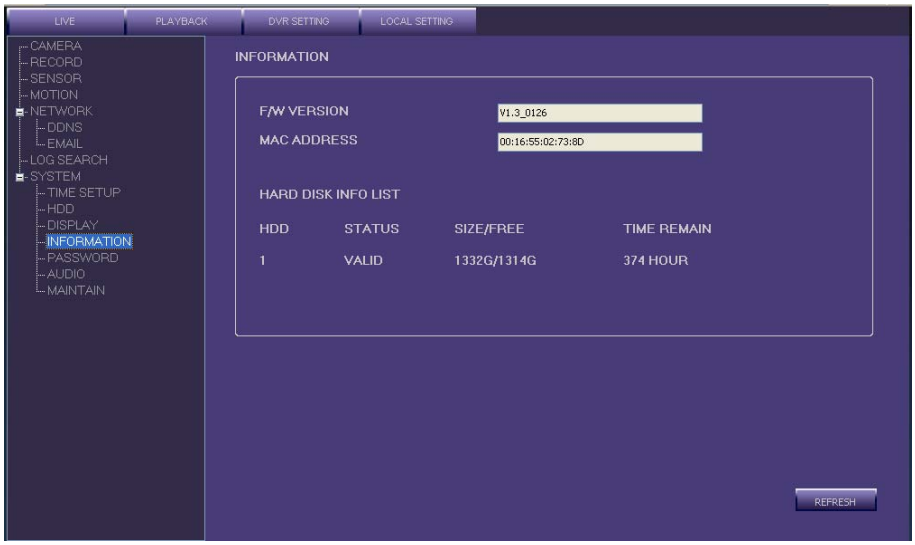

- Account/password

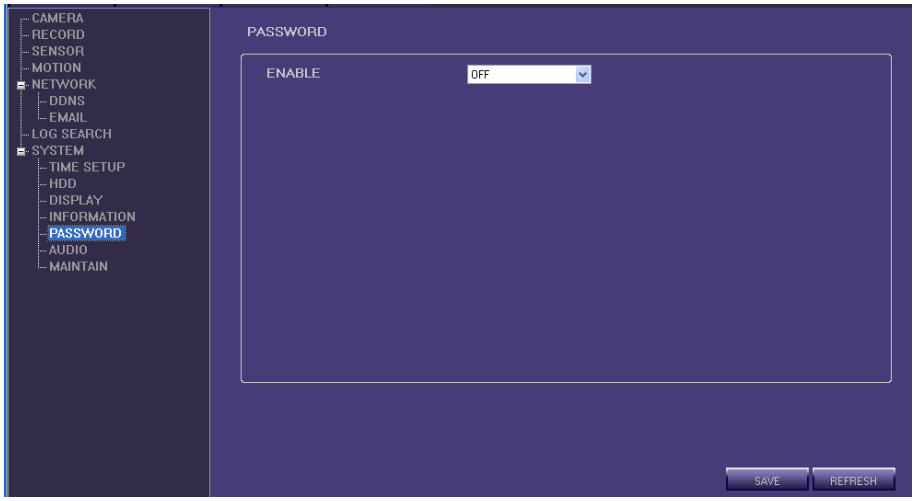

‣ Audio Setting

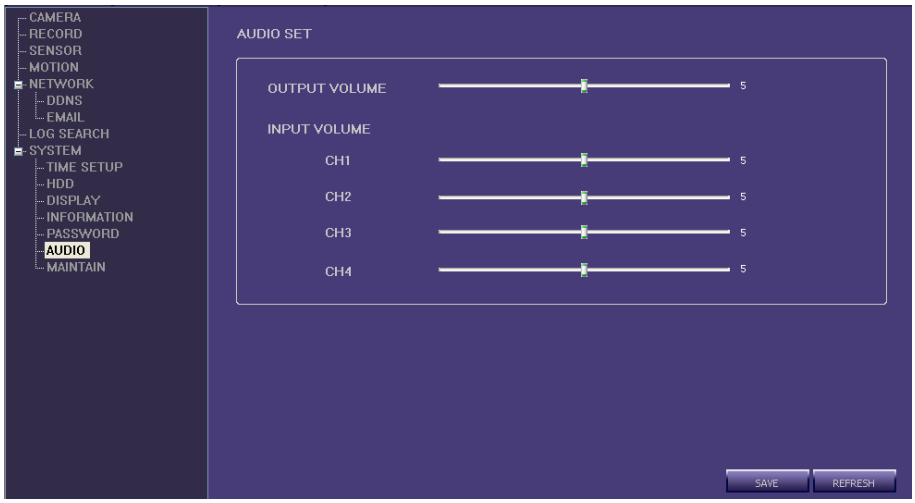

‣ System Maintenance

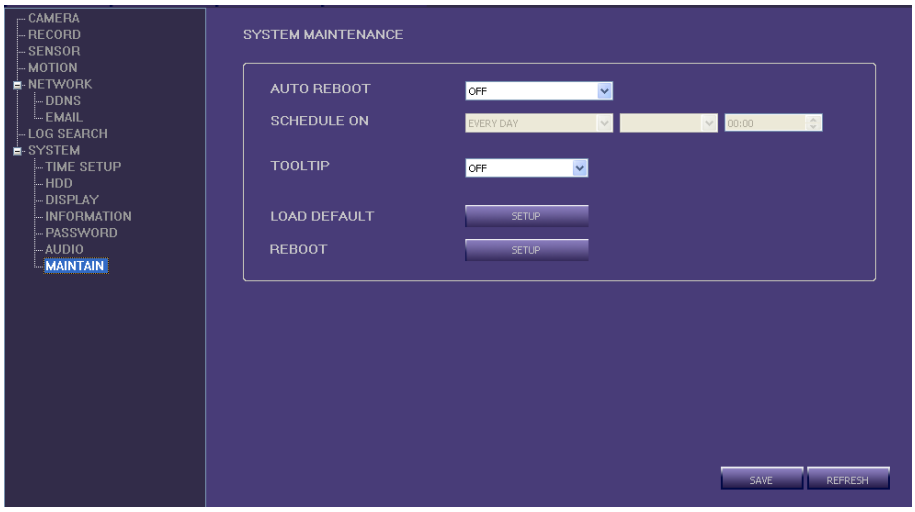

◆ Host setting

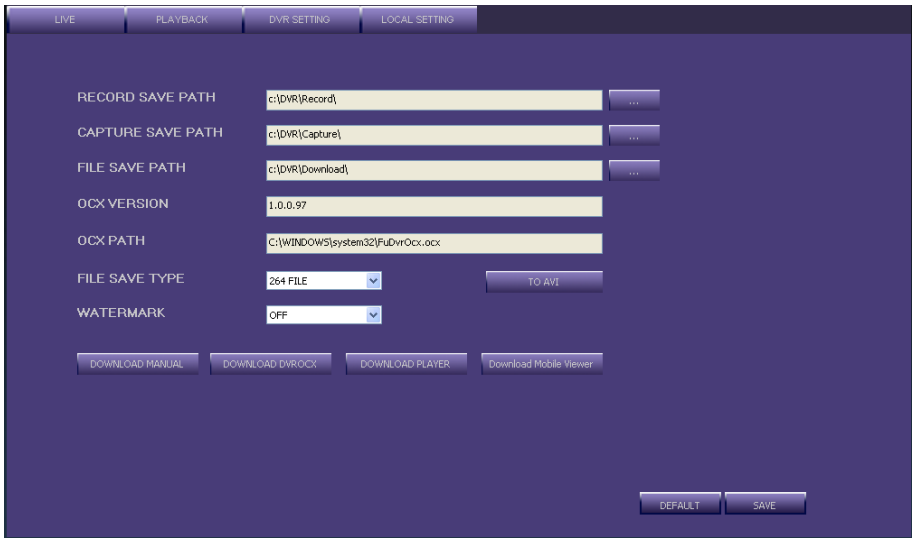

12. Default Setting

Item		Default Setting	Item		Default Setting
Record Setup	Channel	On	**HDD Setup**	Overwrite	Yes
	Resolution	Normal		Pack Time	60 Mins
	Frame Rate	Real-time	**Time Setup**	Date Format	YY/MM/DD
	Quality	Highest		Time Format	24 Hours
	Audio	Disable		Time Zone	GMT+08:00
	Schedule	Always		Daylight Saving	Off
Camera Setup	Channel 1	CH1	**XGA/Audio Setup**	XGA Resolution	800 X 600
	Channel 2	CH2		Output Volume	5
	Channel 3	CH3		Input Volume	5
	Channel 4	CH4	**Alarm Setup**	Mode	On
	Title Position	Top Left		HDD Loss	Off
	Display	On		HDD NO SPACE	Off
	Display Time	On		Video Loss	On
	Switching Time	1 sec.		Alarm Output	1 sec.
Camera Color Setup	Hue	25		Post REC	10 sec.
	Brightness	25		Buzzer	1 sec.
	Contrast	25	**E-MAIL Setup**	E-MAIL	Off
	Saturation	25	**System Maintenance**	Maintenance Schedule Setup	Off
Motion Detection	Channel Status	Off	**PTZ**	Type	Off
	Sensitivity	5		Protocol	Off
Network Setup	Mode	Static IP		Address	001
	Media Port	09000		Baud Rate	9600
	Web Port	00080		Tour Time	Off
	IP Address	192.168.000.100		Tilt Opposite	Off
	NetMask	255.255.255.0			
	Gateway	192.168.000.001			
	DNS	168.095.001.001			
DDNS Setup	DDNS	Off			

13. USB Flash Memory Stick Support List

The following recommended flash drives have passed all testing procedures and are safe to a: backup, b: Playback by PC, and c: update firmware.

Brand	Model Number	Capacity
Transcend	Jetflash V20	4G
	Jetflash V20	8G
	Jetflash V30	16G
	Jetflash V20	32G
Adata	PD1	1G
	PD1	4G
	PD1	8G
	C801	16G
	C801	32G
SONY	Microvault	8G
	Microvault	16G
SanDisk	Cruzer Micro	4G
	Cruzer Micro	8G
	Cruzer Micro	16G
Kingston	DTIG2	4G
	DTIG2	8G
	DTIG2	16G